

CELLARPRO COOLING SYSTEMS

Remote Display Basic Operation

Overview

The Remote Display temperature controller option is similar to the standard temperature controller with the following exceptions:



Basic Operation

Digital Display The temperature displayed on the control is red instead of blue.

Quick Chill Button To activate the "Quick Chill" mode, press the "Up" button for three seconds

 Button

 Icon

To deactivate "Quick Chill", press the "Up" button for three seconds again

The "Quick Chill" indicator (Row 3) light will turn on when the cooling unit is in "Quick Chill" mode,

In the "Quick Chill" mode, the cooling unit will run continuously for 6 hours (or until the unit reaches set point.). This mode is useful after loading "warm" bottles in the cabinet.

Auto Defrost Mode

The cooling unit has a factory default defrost cycle that initiates every 16 hours for 20 minutes. When the cooling unit is in auto-defrost mode, the "Defrost" Indicator light (Top row) will turn on, and the evaporator fan will run.

CELLARPRO COOLING SYSTEMS

Manual Defrost



Hold the defrost button in for 3 seconds to initiate a manual defrost. The "Defrost" Indicator light (Top row) will turn on for a 20 minute defrost cycle.

Light



The light button function is disabled, however pressing it will turn on/off the light indicator on the display (2nd row).

Energy Saver

The remote display is not configured with an Energy Saver mode. The set point can be raised manually for periods where energy savings is desired.