

Ceiling Mount
OWNER'S MANUAL

*Whisper***KOOL**[™]
The Coolest Thing In Wine Storage

WCM 033114

We manufacture, test and certify 100% of our wine cooling units in the USA. By sourcing the best components and closely controlling our manufacturing processes, we can assure the highest-quality, lowest defect manufacturing rates in the industry.

Copyright © 2012. WhisperKOOL. All rights reserved.

WhisperKOOL copyrights this manual, the product design, and the design concepts, with all rights reserved. Your rights with regard to the hardware and manual are subject to the restrictions and limitations imposed by the copyright laws of the USA. Under copyright laws, this manual may not be copied, reproduced, translated, transmitted, or reduced to any printed or electronic medium or to any machine-readable form, for any purpose, in whole or in part, without the written consent of WhisperKOOL.

Every effort has been made to ensure that the information in this manual is accurate. WhisperKOOL is not responsible for printing or clerical errors.

WhisperKOOL reserves the right to make corrections or improvements to the information provided and to the related hardware at any time, without notice.

Vinothèque and WhisperKOOL are registered trademarks, and ECE is a trademark of WhisperKOOL. All rights reserved.

Mention of third-party products is for informational purposes only and constitutes neither an endorsement nor a recommendation. WhisperKOOL assumes no liability with regard to the performance or use of these products.

REV 02


WCM 033114

TABLE OF CONTENTS


Quick Reference Guide	
Unit	2
Knockout Location	3
Controller Layout & Specifications	4
Introduction	6
Receiving & Inspecting the System	7
Before You Start	8
Preparing the Wine Cellar.....	9
Preparing the installation Location.....	12
Installing the Evaporator With Attic Access.....	15
220V Connection for Ceiling Mount Evaporator	20
Installing the Evaporator from Inside of Cellar	21
Drain Line.....	24
Liquid Thermostat (Bottle Probe).....	25
Remote Keypad.....	26
Active Humidity Option	27
Humidistat Installation	28
Ceiling Mount Wiring Diagram	30
Ceiling Mount With Humidity Wiring Diagram.....	31
Ceiling Mount 4000 Condensing Unit Wiring Diagram ...	32
Ceiling Mount 8000 Condensing Unit Wiring Diagram ...	33
Preparing the Condensing Unit.....	35
Condensing Unit Quick Reference Guide	36
Line Set Piping Diagrams	40
Installing the Condensing Unit	41
System Operation.....	43
Controller Functions.....	44
Maintenance Schedule	47
Troubleshooting Guide	48
Technical Assistance & Accessories	50
Installation Terms and Conditions	51

QUICK REFERENCE GUIDE

Bottom View



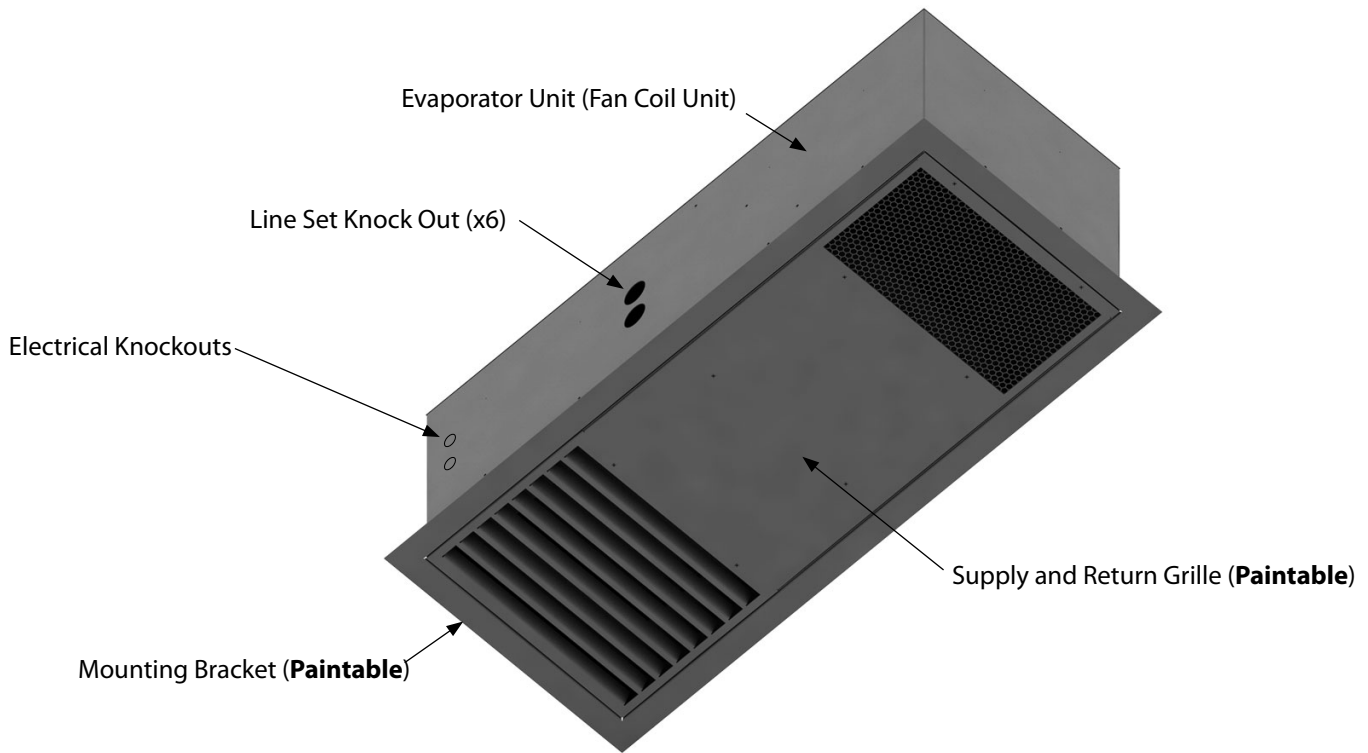


Top View

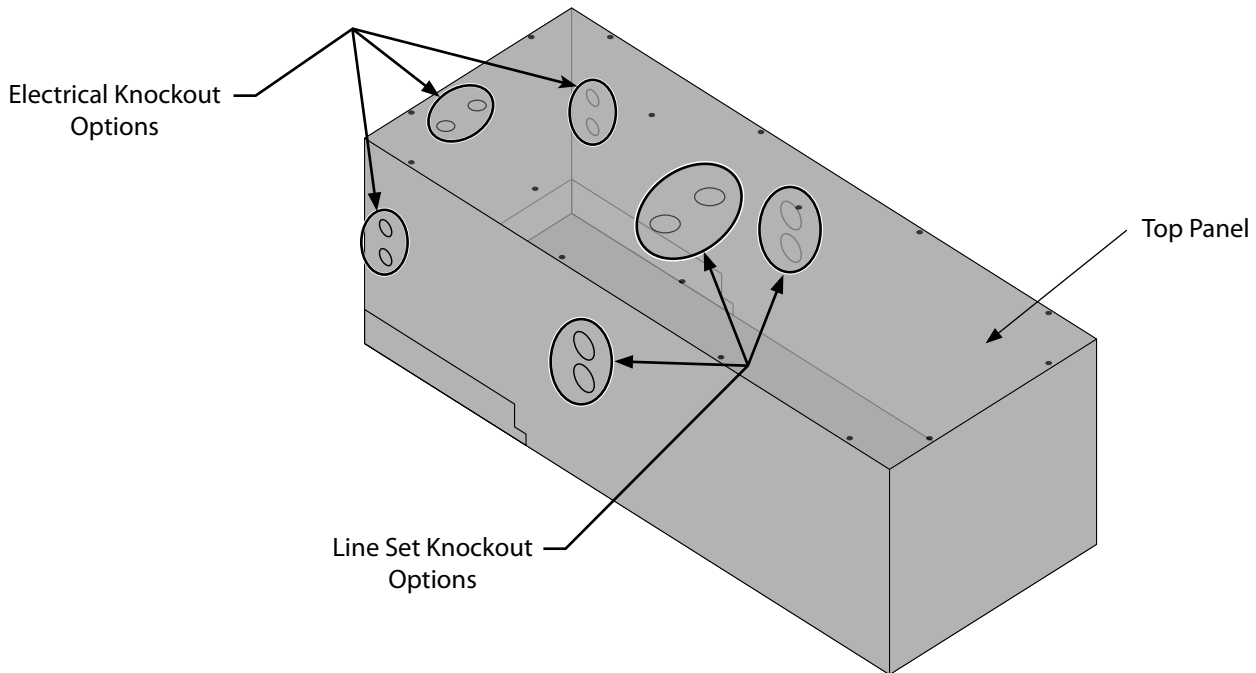

Note: The unit comes black. The mounting bracket and front grille are paintable, enabling you to match your desired color.


KNOCKOUT LOCATIONS

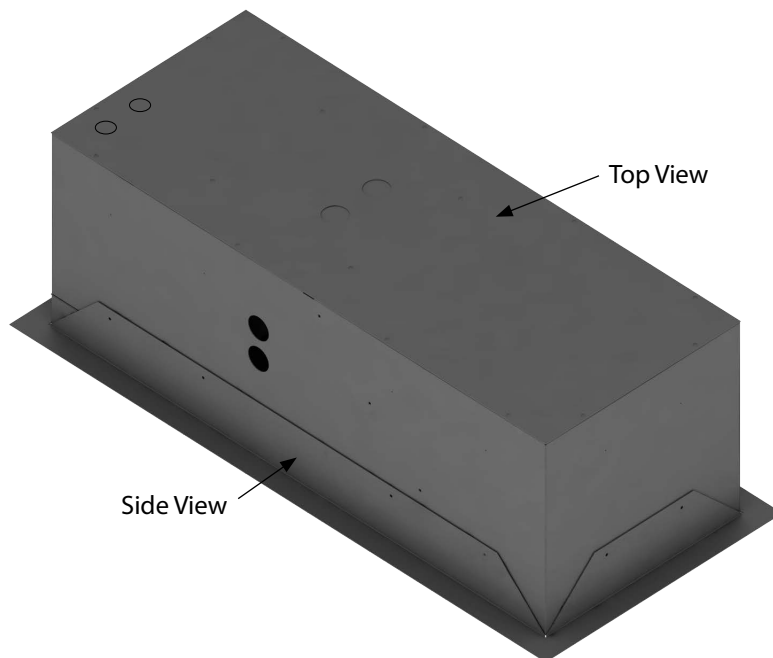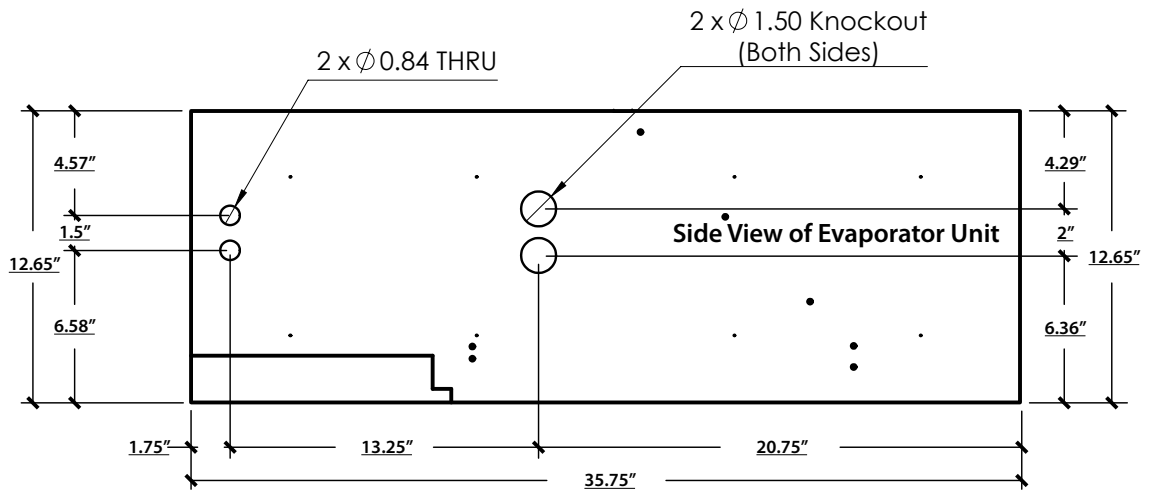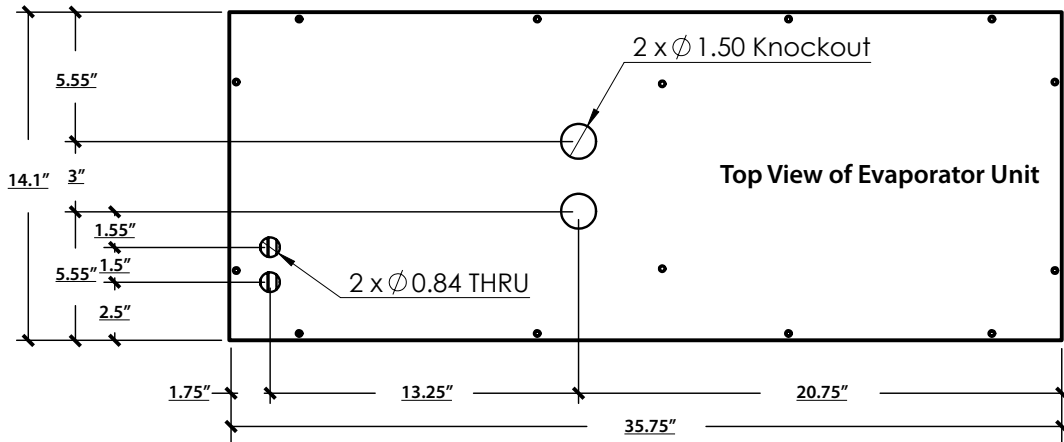

QUICK REFERENCE GUIDE

Controller Layout

Refer to page 44 for complete listing of buttons and symbols.

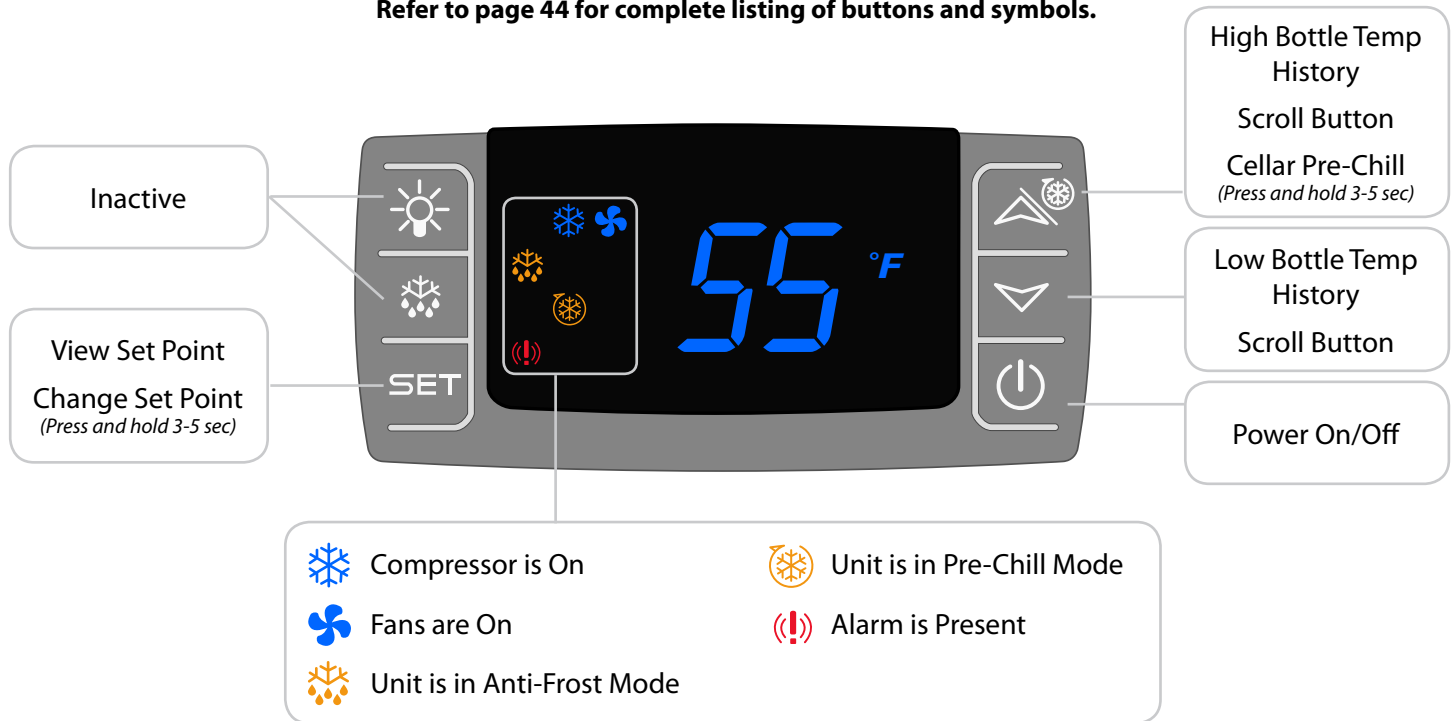

CEILING MOUNT SPECIFICATIONS

Model	4000 Evaporator (Fan Coil Unit)	4000 Condenser (Air Cooled Condensing Unit)
Cellar Size (cu. ft.)	1000	
Dimensions	35.75"L x 14.5"W x 12.65"H	16"L x 11.5"W x 10"H
BTUh with 90° air entering the Condenser Coil	3650	
CFM	321	190
Refrigerant	R-134a	
Condensing Unit HP	1/3++	
Voltage Rating (20 amp dedicated circuit required)	115V or 230V	
Weight (lbs)	80	56
AMPS (Starting/Running)	1.1	32.7/7.2
dBA	58.5	65
Drain Line	1/4" Condensate	
Installation	Evaporator unit (fan coil unit) is installed through the cellar ceiling, condenser is installed up to 100 line ft. from the evaporator unit.	
Thermostat	Digital Control Display	
Temp. Delta	55°F max. temperature differential between the cellar temperature and condenser air intake temperature.	
Warranty	2-year parts and labor	

CEILING MOUNT SPECIFICATIONS

Model	8000 Evaporator (Fan Coil Unit)	8000 Condenser (Air Cooled Condensing Unit)
Cellar Size (cu. ft.)	2000	
Dimensions	35.75"L x 14.5"W x 12.75"H	17.5"L x 13"W x 13.5"H
BTUh with 90° air entering the Condenser Coil	4450	
CFM	321	350
Refrigerant	R-134a	
Condensing Unit HP	1/2	
Voltage Rating (20 amp dedicated circuit required)	115V or 230V	
Weight (lbs)	80	69
AMPS (Starting/Running)	1.1	48/9.5
dBa	58.5	65
Drain Line	1/4" Condensate	
Installation	Evaporator unit (fan coil unit) is installed through the cellar ceiling, condenser is installed up to 100 line ft. from the evaporator unit.	
Thermostat	Digital Control Display	
Temp. Delta	55°F max. temperature differential between the cellar temperature and condenser air intake temperature.	
Warranty	2-year parts and labor	

INTRODUCTION

Customer Service

Thank you for purchasing a WhisperKOOL cooling system. We strive to provide the highest quality products and the best possible customer service. If you have any questions about your system, please call us at 1-800-343-9463 or visit WhisperKOOL.com.

Using the Manual

This Owner's Manual is intended to assist in the proper maintenance of the cooling system. In order to ensure the longevity of your cooling unit, the equipment should be installed as outlined in the this Owner's Manual. It is also vital to establish a proper care and maintenance schedule. Please read and review this Owner's Manual carefully and keep it for future reference.

What is the WhisperKOOL Cooling System?

The WhisperKOOL cooling system is a specialized refrigeration system designed for one purpose only: to maintain the optimal temperature and humidity levels conducive to the proper storage and aging of fine wines. This system produces minimal in-cellar noise and has the most lenient exhaust requirements. An exterior housing is required for outdoor condensing unit installations.

How Does the Cooling System Work?

Similar to the air conditioning systems used for homes, the evaporator and condensing units are installed in separate locations and are connected by a refrigerant line set. The evaporator portion is commonly installed in the wine cellar, with the condensing unit located either outside or in a remote indoor location that is ventilated. An exterior housing is required for outdoor condensing unit installations.

Temperature Setting

The WhisperKOOL system can be set at any temperature within the acceptable wine-aging range of 50°F to 70°F. It is designed to cool up to 55°F cooler than the ambient temperature of the space to which the condensing unit is installed.

WARRANTY REGISTRATION

In order to activate the warranty of your system, the Verification and Operational Documentation must be completed by the certified refrigeration technician installing your system and submitted via mail, fax or e-mail.

Mail to:
WhisperKOOL
ATTN: Warranty Registration
1738 E. Alpine Avenue
Stockton, CA 95205-2505
USA

OR

Fax to:
209-466-4606

OR

Scan and e-mail to:
warranty@whisperkool.com

RECEIVING & INSPECTING THE SYSTEM

Receiving and Inspecting the System

- Lift only at the designated hand hold locations on the shipping container or fully support the unit from underneath. A shipment may include one or more boxes containing accessories.
- Inspect the packaging for any obvious signs of damage or mishandling before opening the container.
- Note any discrepancies or visual damage on the Bill of Lading before signing.
- Place the box containing the unit on a tabletop to prepare it for testing prior to installing.
- Sit unit upright for 24 hours.

Note: WhisperKOOL units are manufactured in the USA and tested prior to shipment.

Review the Packing Slip to Verify Contents

- Check the model number to ensure it is correct.
- Check that all factory options ordered are listed.

If any items listed on the packing slip do not match your order information, contact WhisperKOOL Customer Service immediately.

Check the Evaporator Unit (Fan Coil Unit) Box for the Following Contents:

- **Ceiling Mount Evaporator Unit (Fan Coil Unit)**

Accessory Kit:

- (12) #14 2" Phillips Pan Head Screw
- (1) 1/4" Drain Tube Connector
- (1) 10 ft. 1/4" Drain Line
- (1) 50' Bottle Probe
- (1) Remote Keypad
- (1) 50' Keypad Connection Cable
- (1) Remote Box
- (1) Split System Warranty Checklist
- (2) Strain Reliefs
- (1) Ceiling Mount Owner's Manual
- (1) Mounting Bracket
- (12) #8 x 3/8" Black Oxide Screws
- (2) 7/8" Plugs
- (1) Small Strain Relief
- (2) Cable Ties
- (2) Cable Tie Holders
- (1) T" Plug
- (1) Anti-Siphoning Device

Check the Condenser Box for the following contents:

- **Ceiling Mount Condensing Unit**

Accessory Kit Two:

- (1) 1/4" Sight Glass
- (1) 1/4" Filter Drier

Please leave the unit in its original box until you are ready for installation. This will allow you to move the product safely without damaging it. When you are ready to remove the product from the box, refer to the installation instructions.

TIP: Save your box and all packaging materials. They provide the only safe means of transporting/shipping the unit.

BEFORE YOU START

1. **Inspect the system before installation.** If damage is found, please contact your distributor or WhisperKOOL Customer Service at 1-800-343-9463.
2. The condensing unit **requires a dedicated 115 volt 20 amp circuit.** Use a surge protector with the unit. **Do not use a GFI** (Ground Fault Interrupter) line.
3. It is **REQUIRED** to **install a drain line** to remove condensation from the evaporator unit.
4. The system is intended **for use in properly designed and constructed wine cellars.** Hire a professional wine storage consultant with a valid contractor's license to build your wine cellar.
5. WhisperKOOL requires that all Split Systems be installed by a certified HVAC-R technician only.
6. Warranty is not active until a Warranty Checklist has been received, reviewed, and approved.

If you encounter a problem with your WhisperKOOL system, please refer to the Troubleshooting Guide on page 48. If you have any further questions, concerns, or need assistance, please contact WhisperKOOL's Customer Service at 1-800-343-9463. Please be sure all testing has been completed prior to contacting Customer Service. Please have your results ready for your representative.

PREPARING THE WINE CELLAR

The performance and life of your system is contingent upon the steps you take in preparing the wine cellar.

Note: Improperly preparing your enclosure or incorrectly installing your unit may cause unit failure, leaking of condensation, and other negative side effects.

IT IS HIGHLY RECOMMENDED THAT YOU OBTAIN THE ASSISTANCE OF A WINE STORAGE PROFESSIONAL.

Wine storage professionals work with licensed contractors, refrigeration technicians, and racking companies to build well insulated, beautiful, and protective wine cellars. WhisperKOOL has provided useful tips to assist in the installation process. Our recommendations are meant to act as a guide in the process of building a proper enclosure. Your intended location may have specific needs that we do not address.

Wall & Ceiling Framing

Build wine cellar walls using standard 2x4 or 2x6 construction methods and ceiling joists following the guidelines of local and state codes in your area. As a general rule, the thicker the walls and the higher the insulation value in your cellar, the better it will be at maintaining a consistent temperature.

Insulation

Insulation is **REQUIRED** with the use of the WhisperKOOL product. Standard fiberglass or rigid foam insulation is normally used in cellar construction or, in some cases, "blown-in" insulation is used. It is very important that all walls and ceilings are insulated to keep the cellar temperature as consistent as possible during the summer and winter months. The R-value, or quality of insulation, is determined by the rate at which heat passes through the insulation. The higher the R-value, the more resistant the insulation is to conducting heat. Using higher R-values in insulation will lower your operating costs and unit run time. (R-13 minimum, R-19 recommended, R-30 for ceiling and exterior walls.)

Vapor Barrier

Water vapor creates its own pressure (separate from the air pressure) and will intrude into colder/drier areas. A vapor barrier is **REQUIRED** to prevent the intrusion of water vapor so that the cellar can be kept at the correct temperature and humidity. 6 mm plastic sheeting (recommended) should be applied to the warm side of the cellar walls. The vapor barrier must also be applied to the outside walls and ceiling. If it is impossible to reach the outside, then the plastic must be applied from within the cellar. The most common method is to wrap the entire interior, leaving the plastic loose in the stud cavity so the insulation can be placed between each stud. All of the walls and ceiling must be wrapped in plastic for a complete vapor barrier.

In areas of high humidity, such as Southern and Gulf States, the vapor barrier will prevent infiltration of warm, moist air. The moist air can cause mold to form, and standing water in drain pans promote microbial and fungal growth that cause unpleasant odors and indoor air quality problems. If mold is found, remove it immediately and sanitize that portion of the unit.

Note: High humidity significantly increases the heat load on the cooling system.

Any break in the vapor barriers (cut, nail hole, over-lapping, etc.) will allow a moisture leak and must be sealed. The electric conduit is a "duct" for vapor to travel in. The conduit should be caulked and sealed on the warm air end.



Unobstructed Airflow

Unobstructed airflow to and from the system is critical for the system's overall performance and life span. A minimum three-foot clearance (five-foot is ideal) area is crucial. The air blown by the fans needs to circulate and either dissipate or absorb heat from the space. The system will operate more efficiently with a greater amount of air to exchange.

Note: Avoid attempting to camouflage the unit. This will restrict airflow, and thus the system's ability to work efficiently.




Door and Door Seal

An exterior grade (1 3/4") door must be installed as a cellar door. It is very important that weather stripping is attached to all 4 sides of the doorjamb. A bottom "sweep" or threshold is also required. The door must have a very good seal to keep the cool cellar air from escaping out of the cellar. One of the most common problems with cooling systems running continually is due to the door not sealing properly. **In cases where glass doors are used and the room size is close to the recommended system size, the next larger size WhisperKOOL system should be used.** This will compensate for the insulation loss due to the lower insulating rating of glass.

Ventilation

The necessity of dissipating heat away from the condensing unit is critical to the performance and cannot be overstated. As the system operates and cools, a greater amount of heat is generated on the condensing side of the system. Adequate ventilation is required in order to dissipate heat away from the condensing unit. If ventilation is inadequate, the exhaust will heat the area or room and adversely affect the system's ability to cool. In some cases, it may be advisable to install a vent fan to dissipate heat within the exhaust area on the condensing side of the system. However, you must have a fresh air inlet as well.

Note: If you are unsure about having adequate ventilation in your install location, please contact us to assess your specific installation at support@whisperkool.com or 1-800-343-9463.

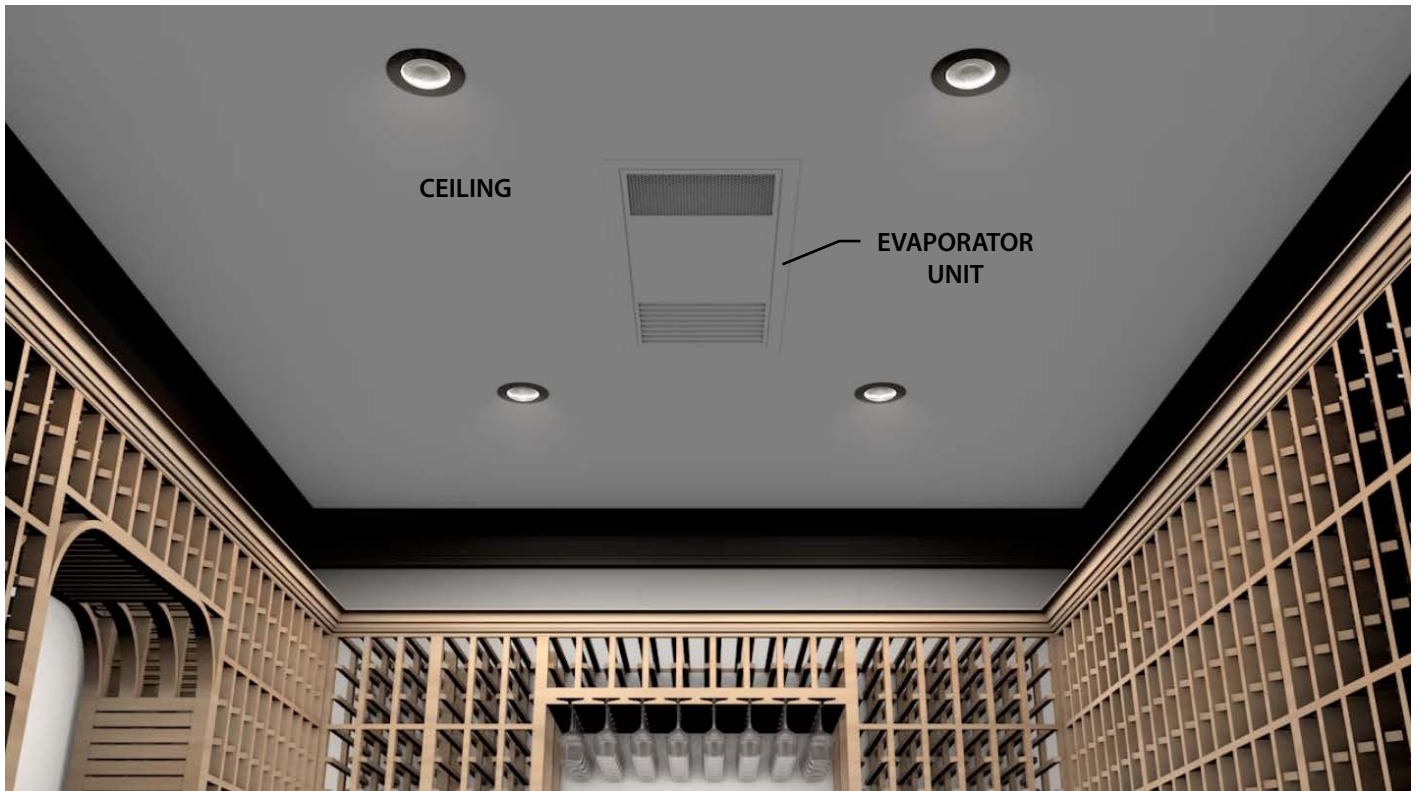

Note: The unit comes black. The mounting bracket and front grille are paintable, enabling you to match your desired color.

Ambient Temperature Factor

The cooling system has the ability to cool a wine cellar efficiently to 55°F as long as the ambient temperature of the area that it is exhausting to does not exceed 110°F. Therefore, you want to exhaust the condensing unit in a space which will not exceed 110°F and will allow for proper dissipation of the heat exhausted by the condensing unit. Without proper heat dissipation the system will not have the capacity to keep the wine at a desirable 55°F.






WARNING! allowing your system to operate in high ambient temperatures for extended periods of time will greatly decrease the life of your system and void your warranty. The cooler the temperature of the air entering the condenser coil, the more cooling capacity the system has. The less heat gain through the common wall, the lower the consumption of electricity.




PREPARING THE INSTALLATION LOCATION



Minimum Tools Needed:

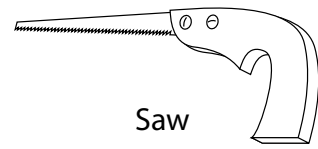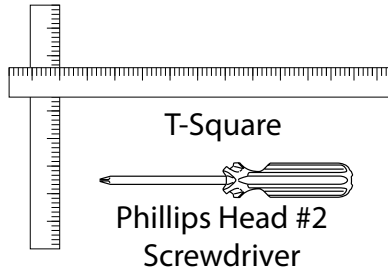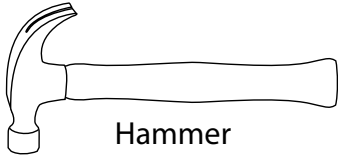



Locate the desired installation location. Using a stud finder, locate the ceiling joists on either side of the center point. Cut and frame an opening in the ceiling measuring 14.5" x 36". **Make sure the framing is sufficient to support the weight of the cooling unit. It is highly recommended to use only the mounting locations provided. These locations ensure that the installer will not drill into any copper or electrical within the system.**

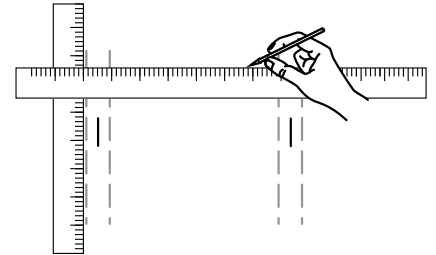


Flush Mount Mounting Option

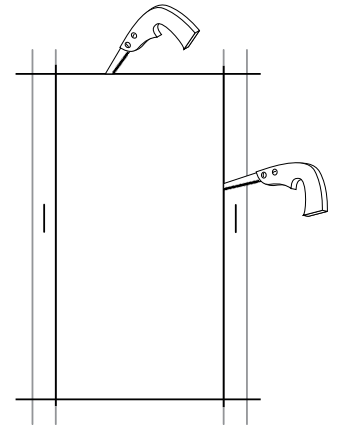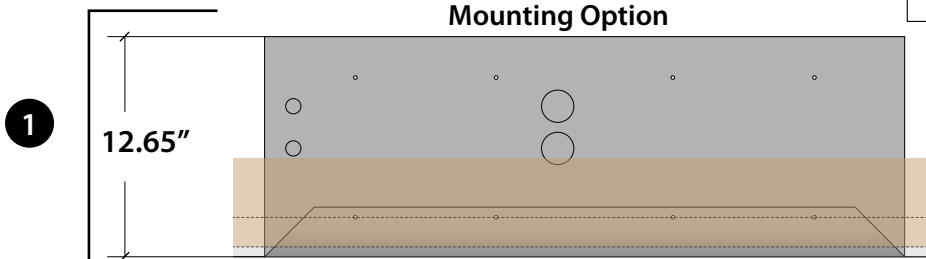


Partially Recessed Mounting Option

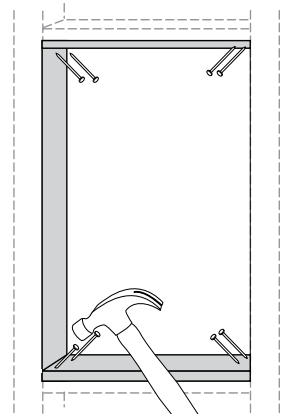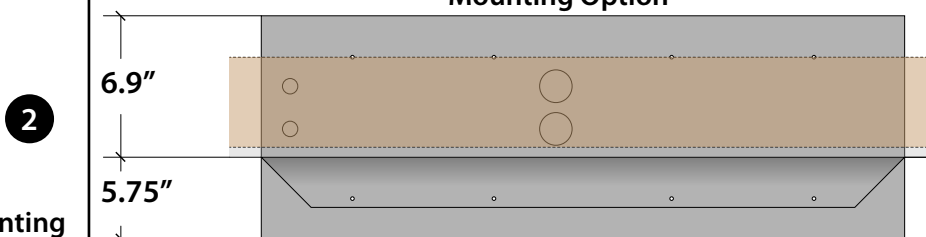

Choose a Mounting
Option suitable
for the installation
location.

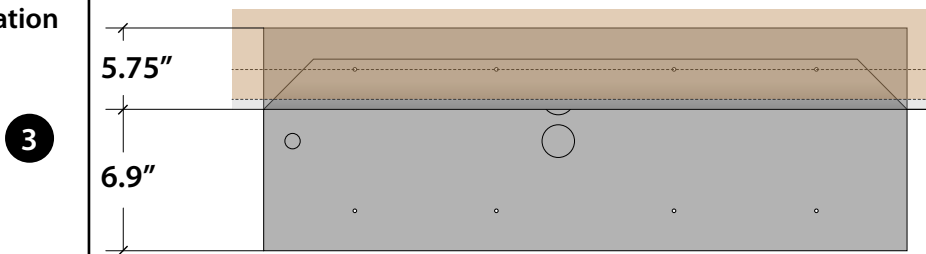

Fully Exposed Mounting Option

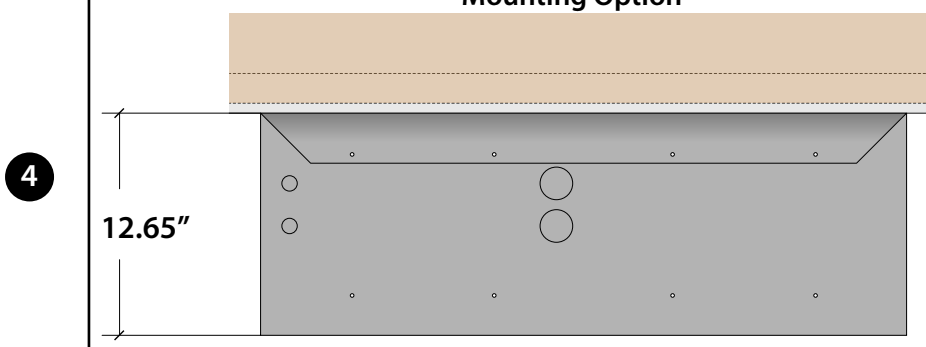


NOTES

INSTALLING THE EVAPORATOR UNIT (TYPICAL INSTALLATION)

ITEMS TO ROUTE BEFORE INSTALLING THE EVAPORATOR

1. Route the line set from the condensing unit to the desired evaporator installation location.
2. Route the keypad cable from the desired keypad location to the evaporator installation location (see page 26 for more keypad information).
3. Route the bottle probe cable from the desired thermostat bottle location to the evaporator installation location (see page 25 for more bottle probe information).
4. If you have purchased a unit with the Active Humidity Option, route the water line from the water source to the evaporator location (see page 27 for more Active Humidity Option Information).
5. If you have purchased a unit with the Active Humidity Option, route the humidistat cable from the desired humidistat location to the evaporator installation location (see page 28 for more Humidistat Information).
6. Route the drain line from a proper discharge location to the evaporator installation location (see page 24 for more drain line Information).
7. Route the power cable wiring to the evaporator installation location.

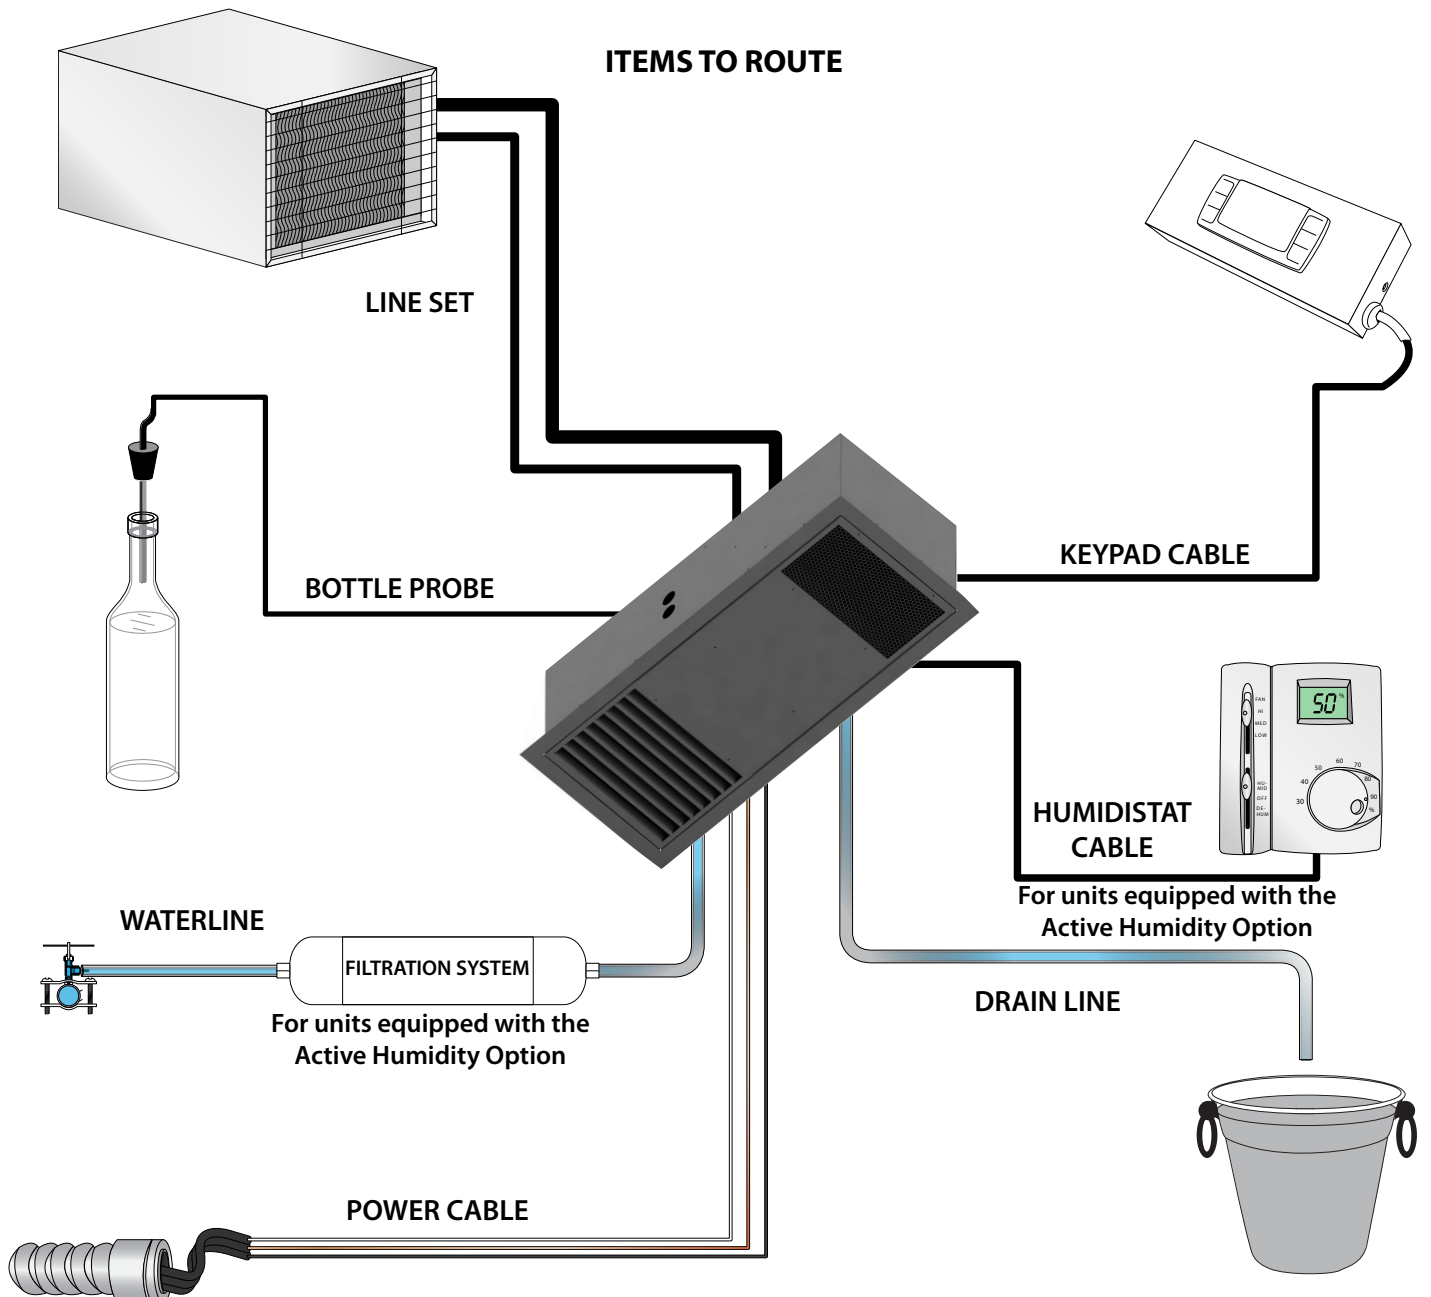

INSTALLING THE EVAPORATOR UNIT WITH ATTIC ACCESS


PREPARING THE EVAPORATOR FOR INSTALLATION

1. Place the evaporator on a working table with the Top Access Panel facing up as shown in Figure 1.




Figure 1


2. Unscrew the 16 screws and remove the Top Access Panel.
3. Remove the Knockout(s) you will be using to route the Line Set into the unit.
4. Remove the Knockout(s) that you will be using to route the items on the previous page into the unit (power cable wiring, keypad cable, bottle probe cable, and humidistat cable).

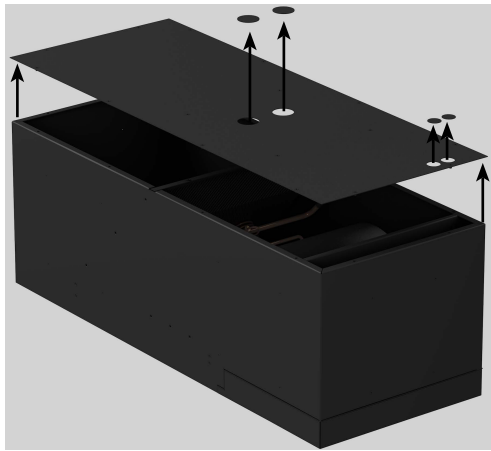

5. Remove the protective caps from the liquid and suction line connection tubes. (as shown below)

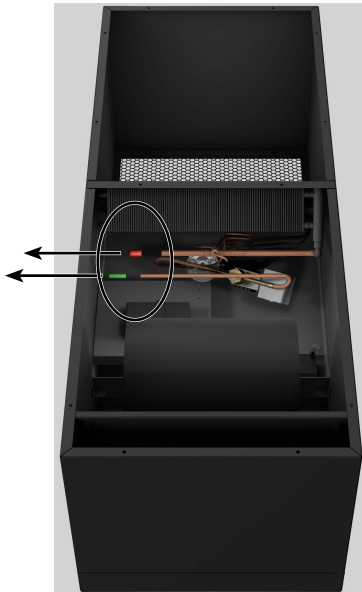

6. Using 1/4" and 1/2" copper tubing, route the liquid and suction lines through the knockouts in the wrapper. Note: 1/2" copper tubing will slip over the 3/8" suction line on the evaporator for an easy connection.
7. Place a wet rag around the suction and liquid lines approximately 4" from the braze joints. This will prevent excess heat from damaging components.
8. To prevent oxidation, purge nitrogen through the system.
9. Braze the copper tubing to the connections on the evaporator unit
10. Insulate the suction line using Armaflex or similar insulation.
11. Route the drain line out of the evaporator unit with the line set.

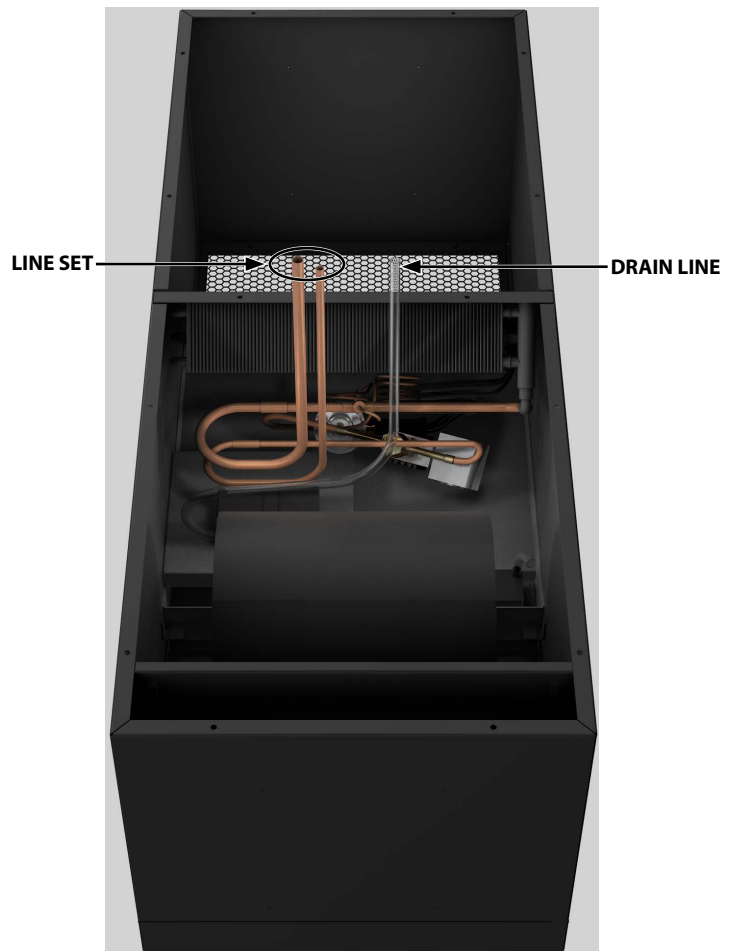


Note: Line Set and drain line should extend to the exterior of the unit through the Knockout(s). Dimensioned Locations of the knockouts are provided on page 3.

INSTALLING THE EVAPORATOR UNIT WITH ATTIC ACCESS

PREPARING THE EVAPORATOR FOR INSTALLATION CONTINUED

12. If you have purchased the Active Humidity Option, route the 1/4" water line out of the evaporator unit with the drain line.
13. Reinstall the protective caps on the end of the line set to prevent debris from entering the system.
14. Reinstall the Top Access Panel and fasten the 16 screws into place.
15. Secure the mounting bracket to the unit as outlined on the next page.

Note: It is highly recommended to use only the mounting locations provided. These locations ensure that the installer will not drill into any copper or electrical within the system.

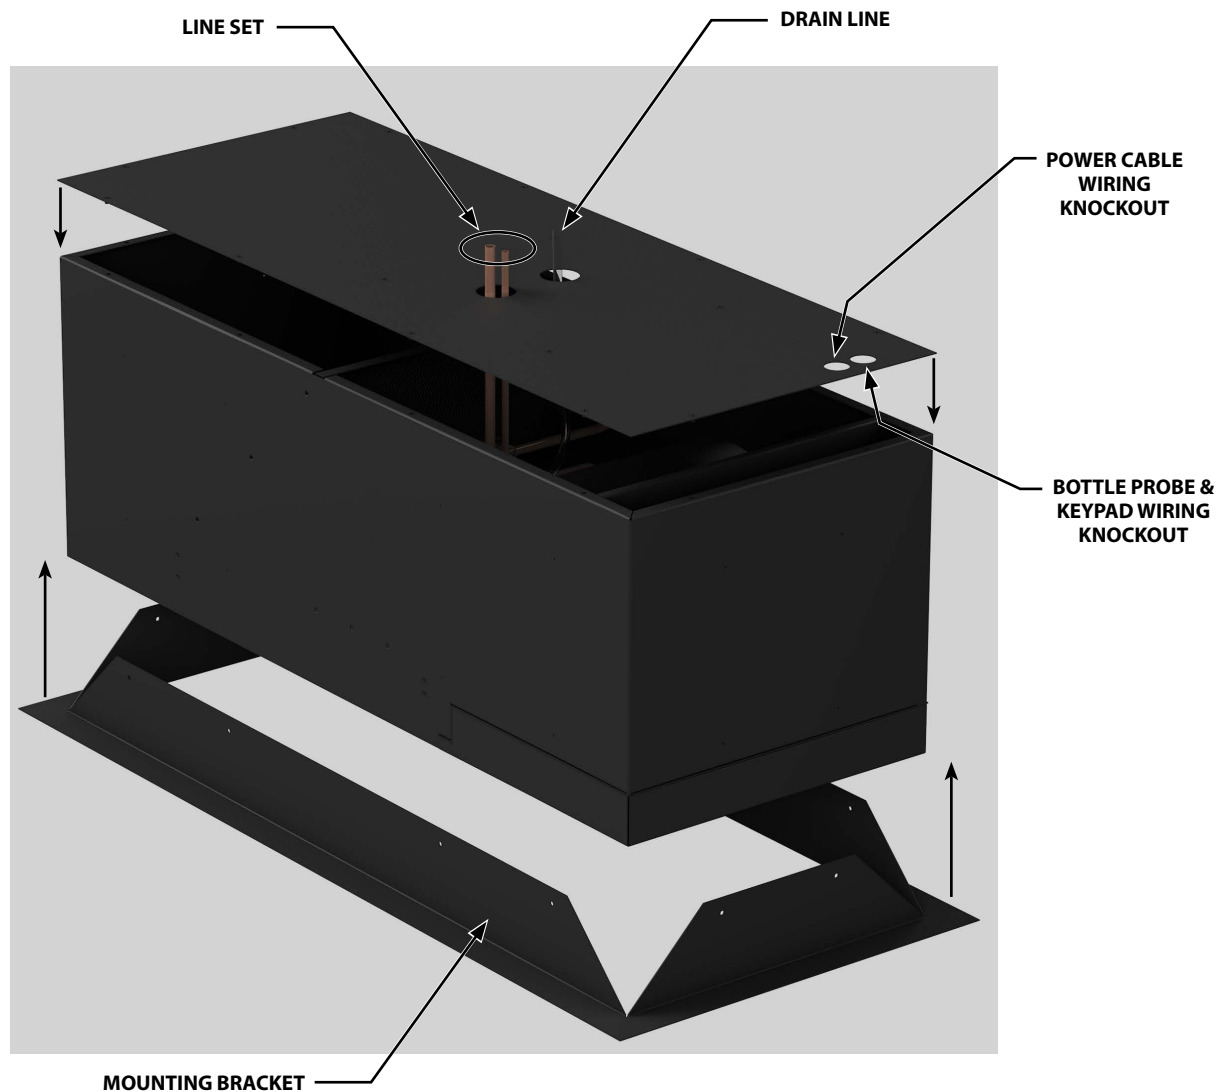

INSTALLING THE EVAPORATOR UNIT

Single Piece Mounting Bracket


The mounting bracket has been designed to secure the unit to the ceiling. Install the mounting bracket to the evaporator unit following the guide below.

Mounting Bracket Installation


Using the guide below, select the desired mounting orientation and slide the mounting bracket onto the unit. Align the mounting holes on the mounting bracket with the pre-drilled holes on the unit. Fasten the mounting bracket to the unit using the supplied 1/2" self-tapping screws. Slide the unit through the framed opening in the ceiling. Secure the unit to the opening using the 12 supplied 1 3/4" hex head screws.

Note: It is highly recommended to use only the mounting locations provided. These locations ensure that the installer will not drill into any copper or electrical within the system.

1. Secure the mounting bracket to the unit.

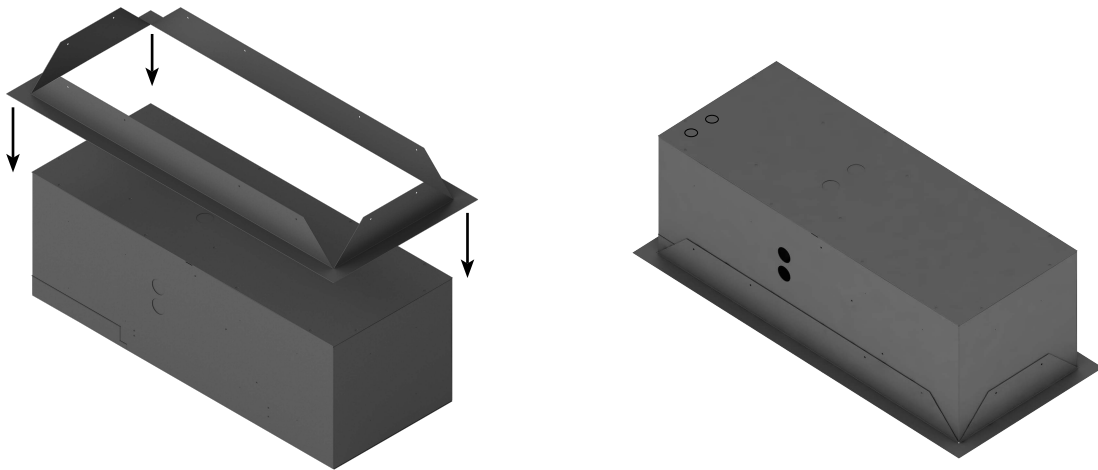

2. Secure the unit's mounting bracket to the opening using the 12 supplied 1 3/4" hex head screws.

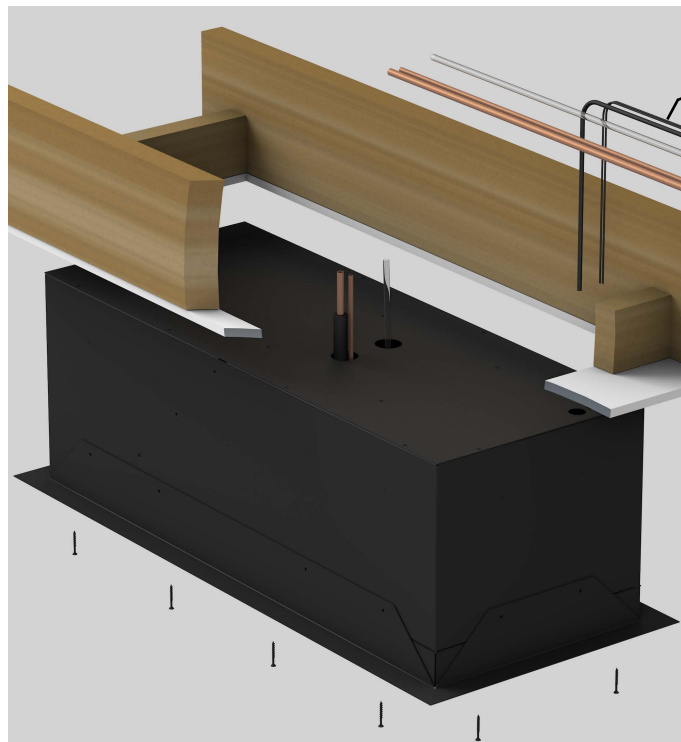

Routed Items:

1. Keypad & Bottle Probe Wiring
2. Power Cable Wiring
3. Drain Line
4. Line Set


INSTALLING THE EVAPORATOR UNIT WITH ATTIC ACCESS

CONNECTING THE EVAPORATOR UNIT


1. Insert the following items into the unit through the removed knockouts: power cable wiring, keypad cable, bottle probe cable and humidistat cable (optional).

Note: The diagram on page 16 labels the knockouts to route these items into.


2. Remove the eight screws securing the supply and return air grille.
3. Grasp the grille and pull straight down. This will release the grille from the ball studs.

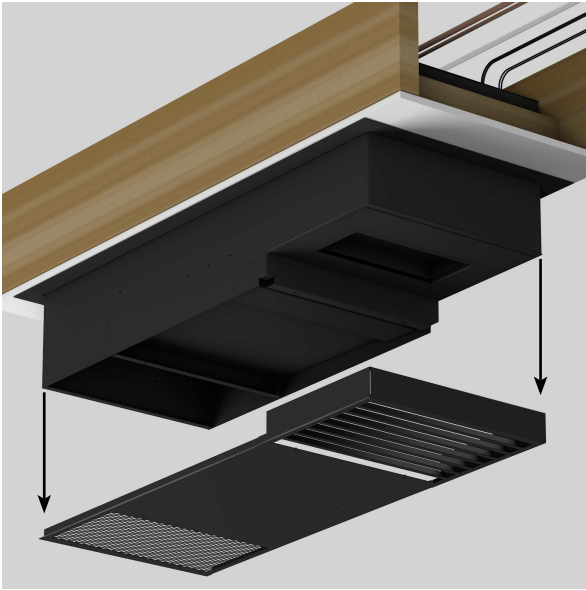


4. Remove the two screws securing the Control Access Panel in place and remove the panel.
5. Remove the thumbscrew holding the electrical panel and slide the panel.

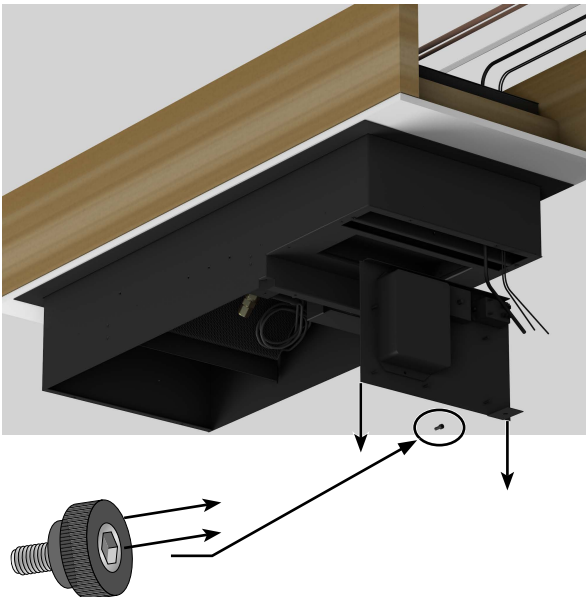

 
6. Connect the power cable to the evaporator.
7. Connect the keypad cable to the evaporator (see page 26 for more keypad information).



 8. Connect the bottle probe cable to the evaporator (see page 25 for more bottle probe information).



 9. If you have purchased the Active Humidity Option, connect the Humidistat cable to the evaporator (see page 28 for more humidistat information).



10. Slide the electrical panel back into the evaporator unit and secure with the thumbscrew.
11. Re-install the control access panel.

INSTALLING THE EVAPORATOR UNIT WITH ATTIC ACCESS

CONNECTING THE EVAPORATOR UNIT IN THE ATTIC

12. If you have purchased the Active Humidity Option, connect a water line to the water connection port on the evaporator unit, shown in Figure 5 (see page 27 for more Active Humidity Option Information).


 


Figure 5 (Optional)

13. Connect the drain line following the directions on page 24.
14. Remove the caps on the end of the line set.
15. Purge nitrogen through the system.
16. Braze the line set to the suction and liquid line ports on the evaporator unit.
17. Seal all gaps around the unit using expanding foam.
18. Using fiberglass insulation, wrap any part of the wrapper that is not inside the cellar. This will prevent condensation from forming on the wrapper.

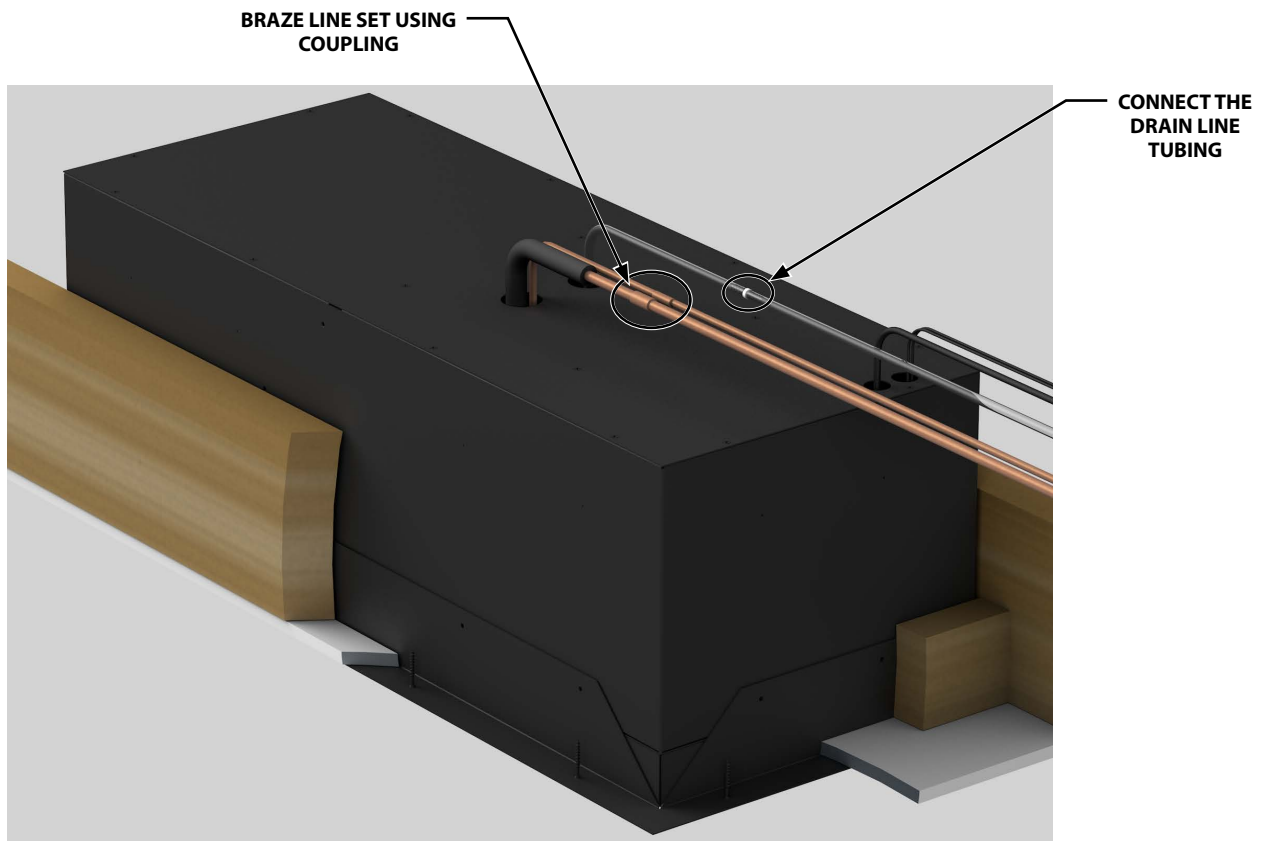


19. If desired, paint the mounting bracket and Front Access Panel to match the color of the ceiling.

THE NEXT SECTION IS AN INSTALLATION PROCESS FOR SITUATIONS WHERE ATTIC ACCESS IS NOT AN OPTION.


220V CONNECTION FOR CEILING MOUNT EVAPORATOR UNIT

NOTE: These Instructions are only for units equipped with the 220V option selected at time of purchase.


1. Connect the supplied power cord with the exposed wire ends to the evaporator unit following the wiring instructions in this Owner's Manual.
2. Plug the power cord into one of the outlets labeled 110V on the transformer.

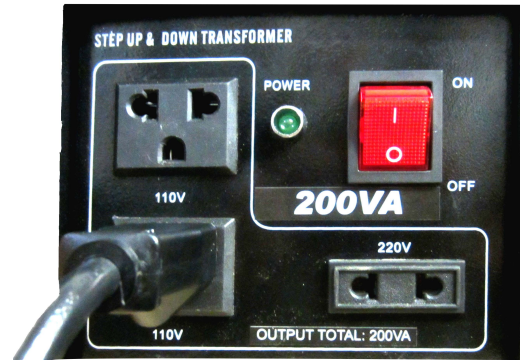

3. On the back of the transformer make sure that the switch is set to 220V.

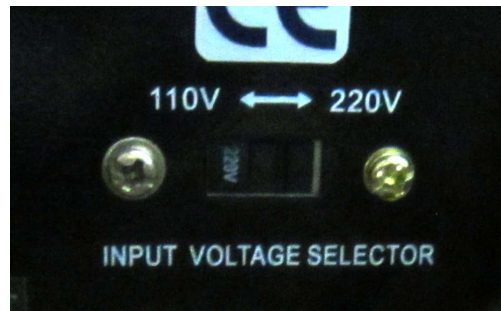


4. Plug the transformer in to a 220-230V power source.
5. To apply power to the unit move the switch on the front of the unit to the "on" position.

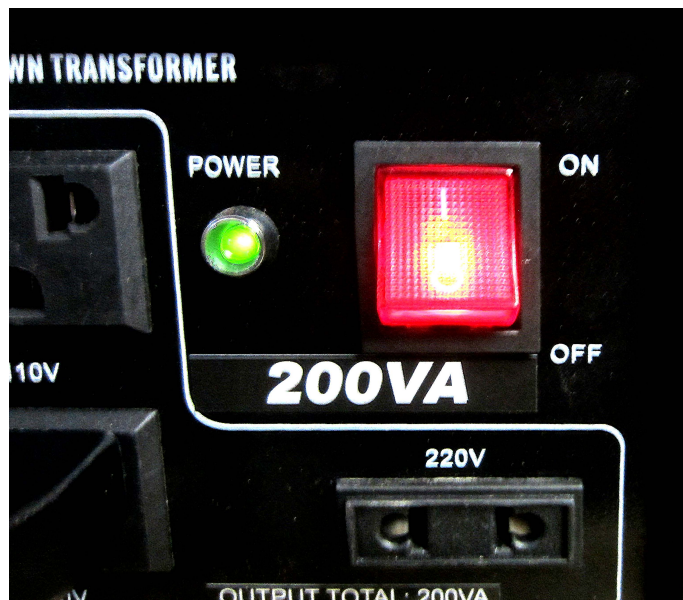


INSTALLING THE UNIT FROM INSIDE THE CELLAR

NOTE: The Ceiling Mount Unit can still be used even with limited or no above ceiling access. For installations with limited or no above ceiling access, do not remove the top of the evaporator unit. Follow the instructions below for installation.

1. Remove the knockouts from the top of the unit for the line set and electrical.

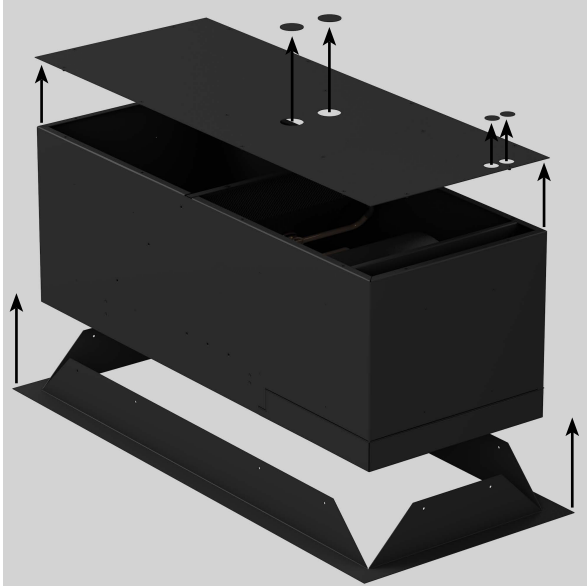

2. Route all electrical and tubing to the installation location as outlined on page 14.

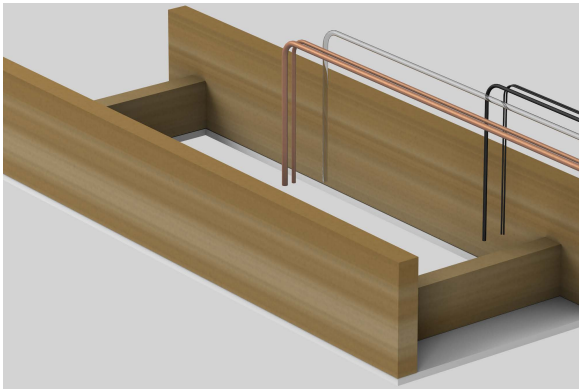


3. Install the mounting bracket as shown on page 17.




Note: Depending on installation location, the Flush Mount mounting option might not be suitable.

4. Route the line set, drain line, water line, power wires, keypad cable, bottle probe cable and humidistat cable into the evaporator housing through the knockouts removed in the first step.

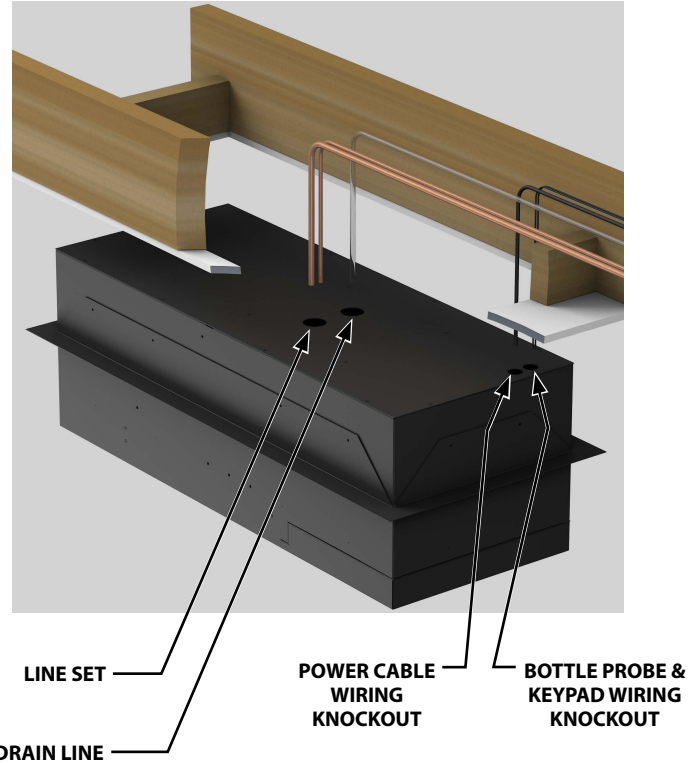

5. Mount the evaporator unit to the ceiling using the supplied 1 3/4" hex head screws.

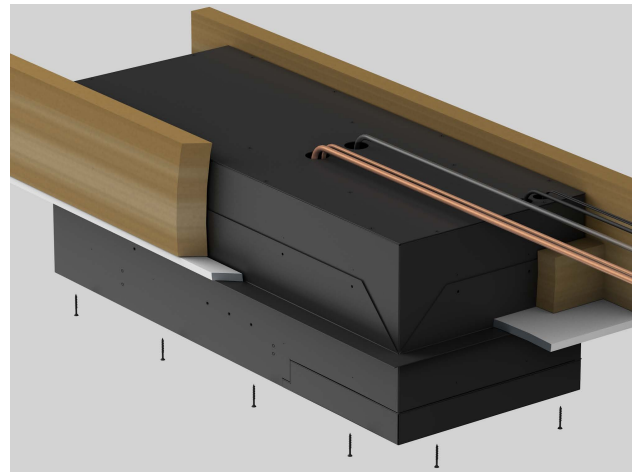


INSTALLING THE UNIT FROM INSIDE THE CELLAR


6. Remove the eight screws securing the supply/return air grille.
7. Grasp the grille and pull straight down. This will release the grille from the ball studs.




8. Remove the two screws holding the drip tray in place.
9. Remove the drip tray.

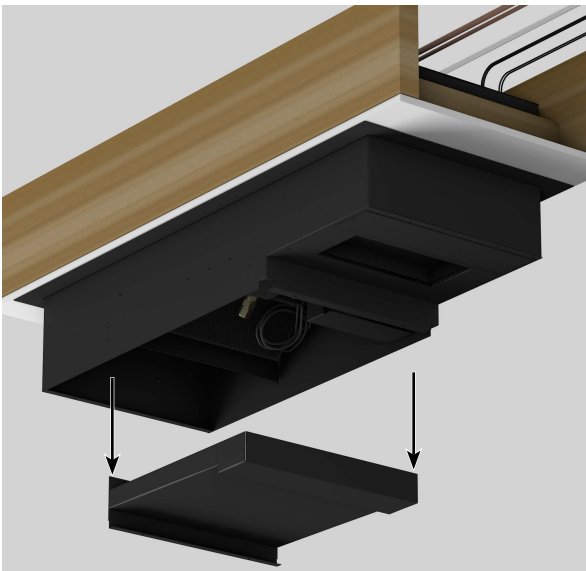

10. Remove the 3 nuts holding the pump bracket in place. Pull the pump bracket down and out of the way.

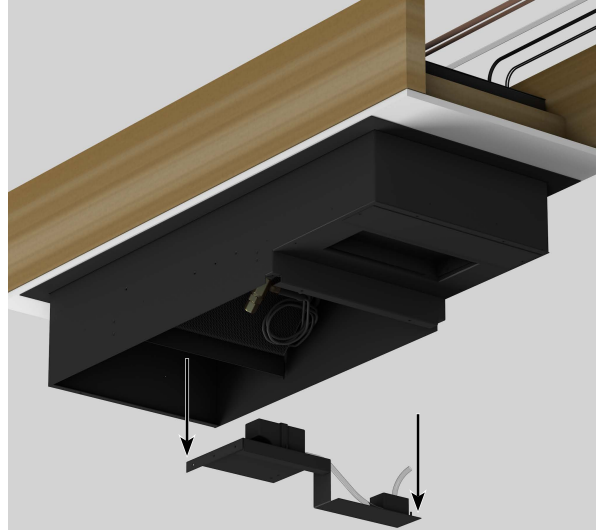


11. Remove the protective caps on the end of the line set connections.

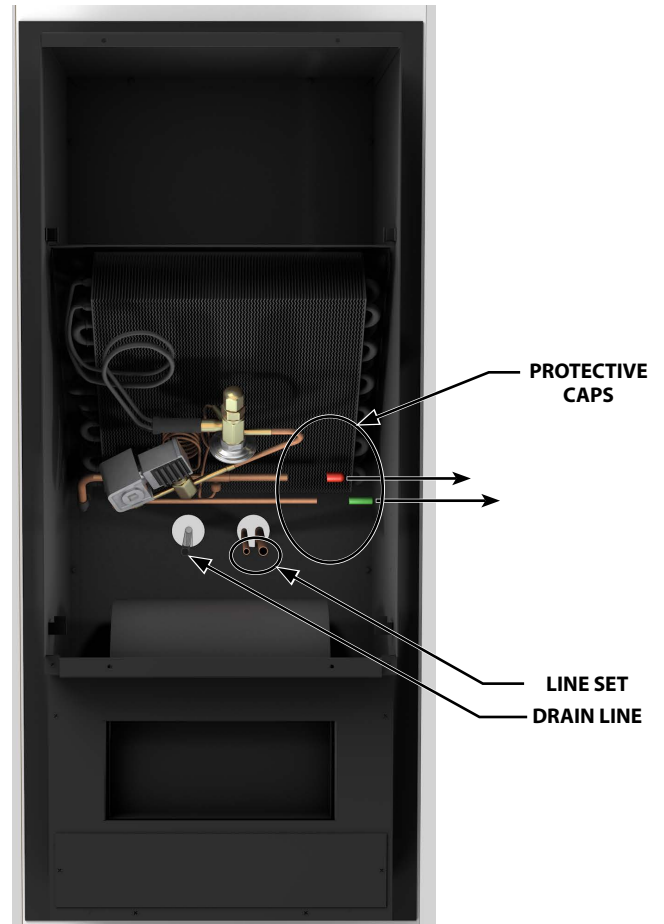

INSTALLING THE UNIT FROM INSIDE THE CELLAR


12. Connect the line set to the liquid and suction lines on the evaporator. Note: 1/2" copper tubing will slip over the 3/8" suction line on the evaporator for an easy connection.
13. Place a wet rag around the suction and liquid lines approximately 4" from the braze joints. This will prevent excess heat from damaging components.
14. Purge nitrogen through the system to prevent oxig
15. Braze the copper tubing to the connections on the evaporator unit.
16. Insulate the suction line using Armaflex or similar insulation.

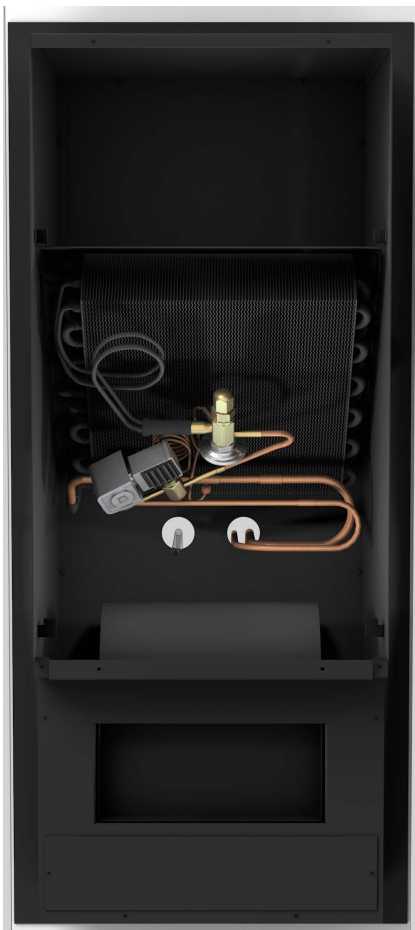

17. Connect the drain line to the pump discharge line using the supplied 1/4" barbed coupling. Follow the directions on page 24 for proper drain line routing.
18. If you have purchased the Active Humidity Option, connect the water line to the evaporator unit by pushing it into the 1/4" coupling supplied on the unit.



19. Reinstall the pump bracket and drip tray.

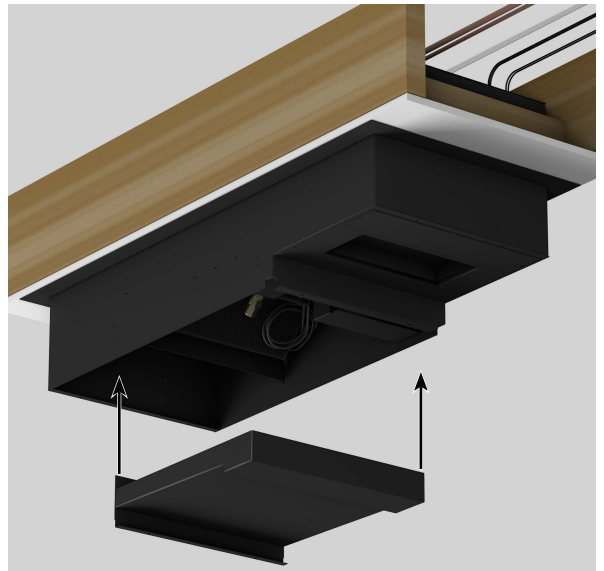

20. Follow steps 4-11 on page 18 to complete the wiring on the unit.
21. If desired, paint the exterior of the evaporator housing to match the color of the ceiling.

Note: The unit comes black. The mounting bracket and front grille are paintable, enabling you to match your desired color.

DRAIN LINE

Condensation Drain Line

The condensation drain line tube is used to remove excess condensation from the unit to a proper discharge location. It is important that the drain line tube is properly connected.

Failure to use the condensation drain line tube will void the warranty on the unit.

Drain Line

The Ceiling Mount evaporator features a drain line pump system that removes excessive condensate build up in the drain pan. During operation, the drain pan collects water that drips from the coil. The drain line pump system will prevent overflow and leaking by allowing for discharge of the additional condensate.


The longevity of the drain line pump may be compromised if the system operates dry. To prevent the pump from starting dry an anti-siphon device must be installed in the drain line tubing as shown in Figure 9. This device should be installed in the drain line post pump on the exterior of the evaporator unit. WhisperKOOL recommends to install the anti-siphon device relatively close to the evaporator because water will remain between the pump and the device.

NOTE: The anti-siphon device only needs to be used when the drain line is routed below the level of the evaporator unit. In this case the anti-siphon device should be installed in the drain line at the level of the evaporator unit.

Connecting the Drain Line

Route the drain line to an appropriate discharge location using the supplied barb coupling and 1/4" tubing.

Do not route the drain line more than 30 vertical ft.

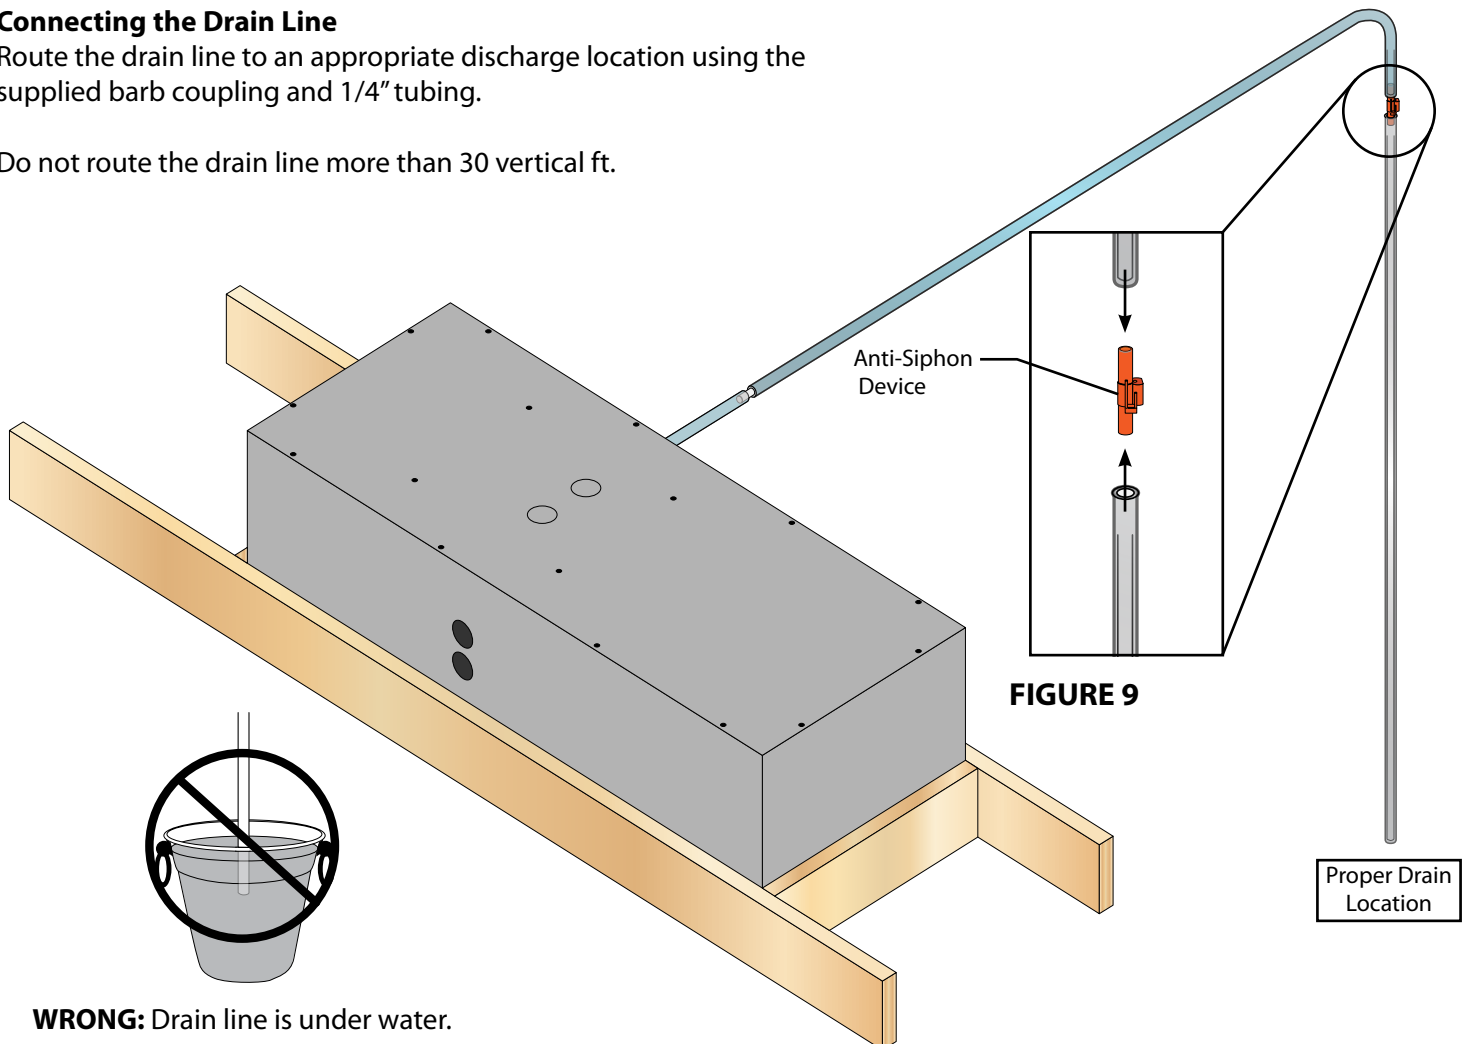

WRONG: Drain line is under water.

To prevent mold from growing, allow the drain line to hang above the water line.

Note: Water will remain between the pump and the anti-siphon device at all times.

LIQUID TEMPERATURE - MEASURING THERMOSTAT

The WhisperKOOL Series cooling units come equipped with a liquid temperature measuring thermostat. This incorporates the following advantages:

1. Wine is kept in a very precise, controlled environment. This assures a consistent temperature.
2. By measuring liquid rather than air, the cooling unit is protected from rapid cycling caused by fluctuations in air temperature.

Liquid Temperature - Measuring Thermostat


To assure a consistent temperature, place bottle probe at least 3 feet away from the air output and not in the flow of the air.

To Use the thermostat:

1. Locate an empty wine bottle.
2. Fill 3/4 full with room temperature tap water.
3. Place bottle probe securely into bottle.
4. Place bottle with probe level and to the side of the unit in your wine cellar. ***It is recommended that it be placed in a central location of your wine cellar.*** Avoid pulling too much on the probe cord. It may become disconnected resulting in non-operation of the unit.

Note: The thermostat can be set between 50°F and 67°F.



Remember: The WhisperKOOL unit operates based on the temperature of the water. Do not be misled by thermostats reading air temperature. The air temperature in the cellar will be cooler than the liquid temperature of the wine while it is reaching optimum balanced temperature.

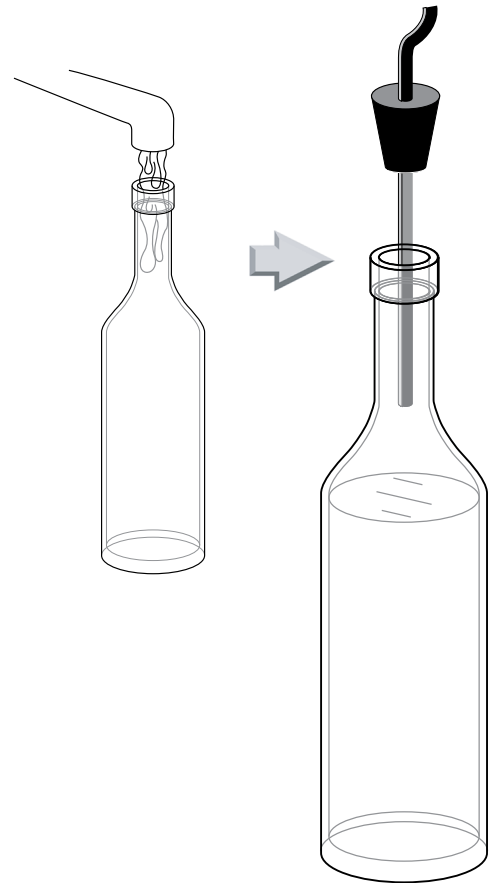


REMOTE KEYPAD: INSTALLATION AND CONFIGURATION

Note: A 50ft communication cable is included and the keypad can be installed up to 300 feet away from the evaporator unit. Longer lengths can be ordered by calling 1-800-343-9463 ext. 751.

Route the communication cable from the evaporator unit to the desired keypad location. Remove the wall mount bracket from the display housing. Using appropriate anchors or fasteners, secure the wall mount bracket to the wall. If routing the communication cable through a wall, connect the wires to the back of the control panel following the image below. Connect the red wire to the upper (+) terminal. Connect the black wire to the lower (-) terminal. If the communication cable is not routed through the wall; remove the plug in the side of the display housing. Route the cable through the hole and connect to the back of the display as shown below. Reattach the keypad box to the bracket.

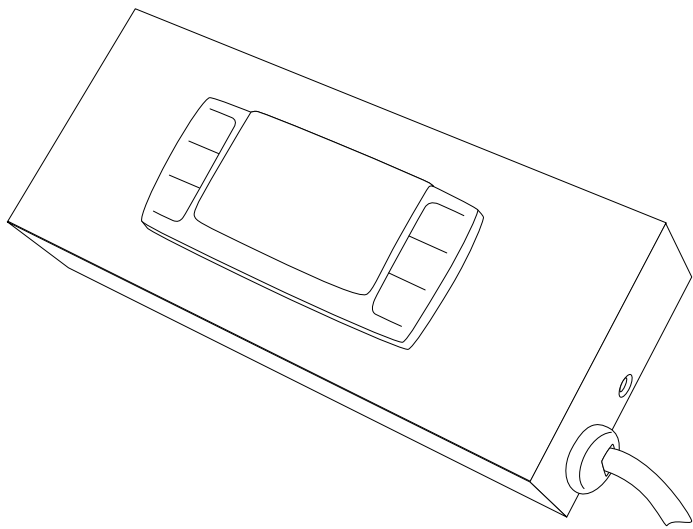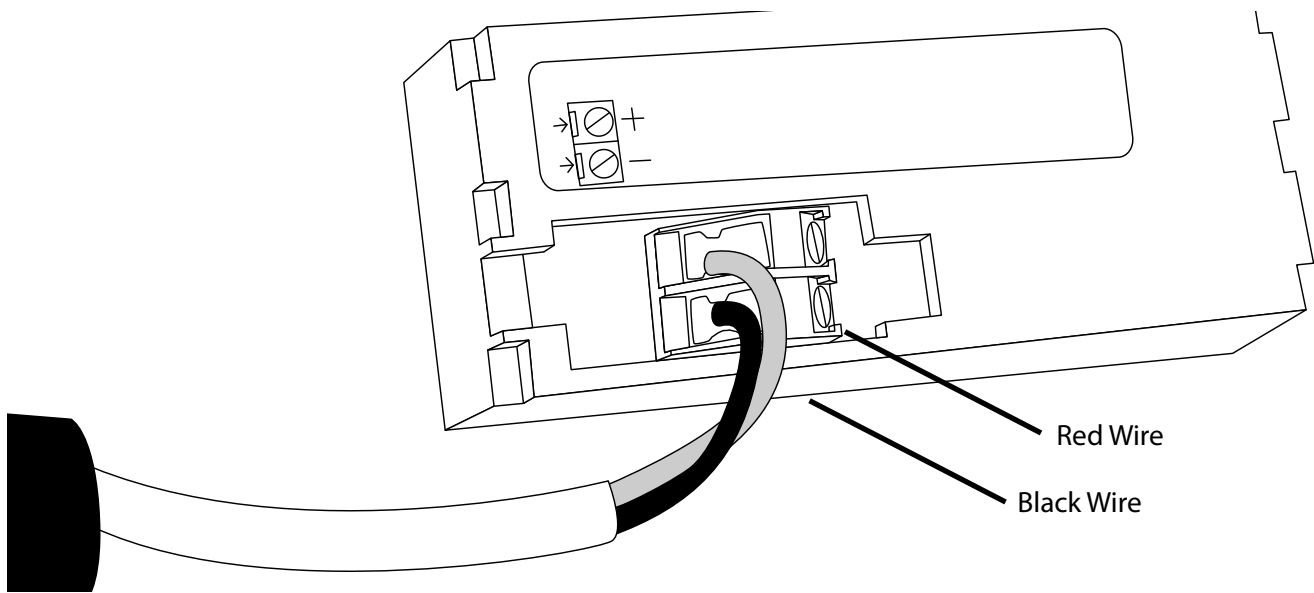

Connection wire in Side Mount configuration

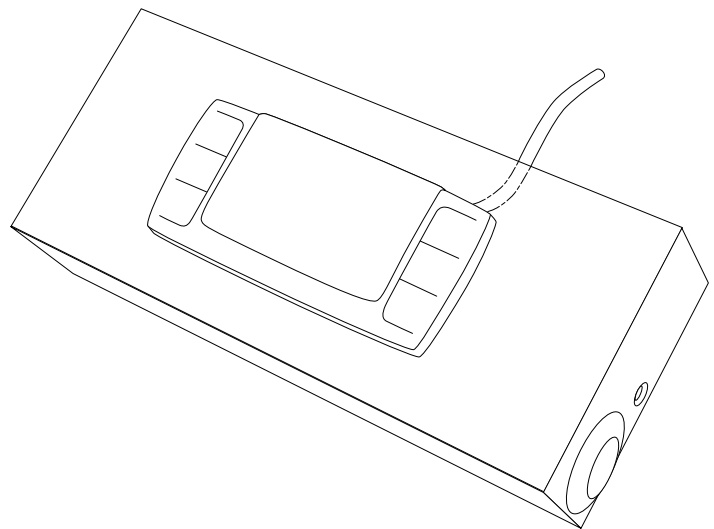

Connection wire in Rear Mount configuration

ACTIVE HUMIDITY OPTION OVERVIEW

ACTIVE HUMIDITY SPECIFICATIONS

dBa	58.5
Humidistat Range	30-90% RH
Humidistat Accuracy	± 1%
Humidistat Adjustment Increments	1%
Water Supply Feed Rate	0.63 gph @ 40 psi

Accessory Included with Active Humidity Option:

- (1) 25 ft. Humidistat Cable
- (1) Dayton Humidistat

Use of the Active Humidity Option

Humidity may fluctuate in the wine cellar. The Active Humidity Option stabilizes the environment by adding moisture when the humidity levels drop below your desired level. Using a humidistat and a water source, the Active Humidity Option is able to regulate and establish a humid environment suitable for wine storage.

Note: The ideal humidity of a wine cellar is between 50-70%.


General Active Humidity Option Recommendations

- Water source needs to have at least 40 psi.
- Water tubing size: 1/4" O.D.
- Water source should be tested for content and characteristics.
- In areas that are known to have hard water, the use of a water softener system is required.

Note: Failure to install a water softener or a filtration system will allow an excessive particle residue buildup and may lead to system failure.

- Even if the area is not known to have hard water, the use of a filtration system (particle filter) is required.
- Clean the evaporator coil every 3 months to remove particle residue buildup.
- It might be best to use a self-piercing saddle valve as a simple connection to a water source.
- Clean or replace the Misting Nozzle every 12 months.

Do not allow water leakage inside of the Unit.

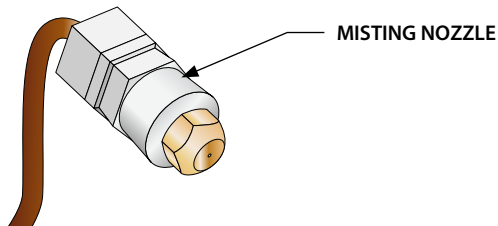

Self-Piercing Saddle Valve

Install a Self-Piercing Saddle Valve to a nearby water supply for simple connection to a water source as shown in Figure 1.

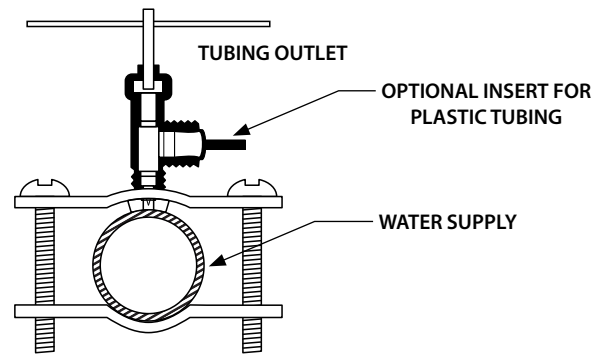


Figure 1

Water Flow Order

- The water supply should pass through either a water softener or a Filtration system before reaching the unit as shown in Figure 2.
- Route a 1/4" Copper, Pex, or equivalent tubing from the water source and connect to the water inlet fitting on the unit as shown in Figure 3.
- Turn on the water and check for leaks.

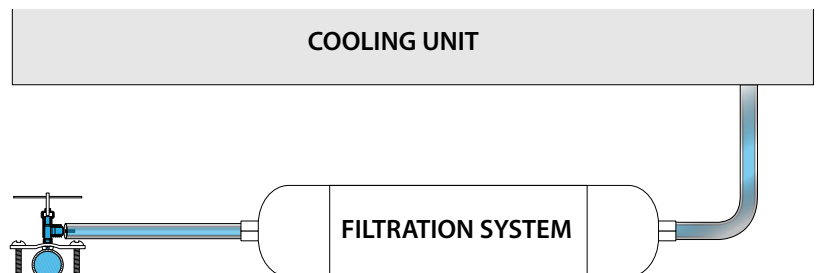


Figure 2

 


Figure 3

HUMIDISTAT INSTALLATION

Note: Only a 120v Humidistat can be used with this unit.

Routing the Wiring

1. Plug the circular connector from the humidistat cable into the circular connector on the unit as shown in Figure 1.
2. Route the wire from the unit to the desired humidistat location.

 


Figure 1

Removing the Cover

1. Move both slide controls to the bottom position.
2. Use a screwdriver to loosen the screws at the bottom of the humidistat as shown in Figure 2.

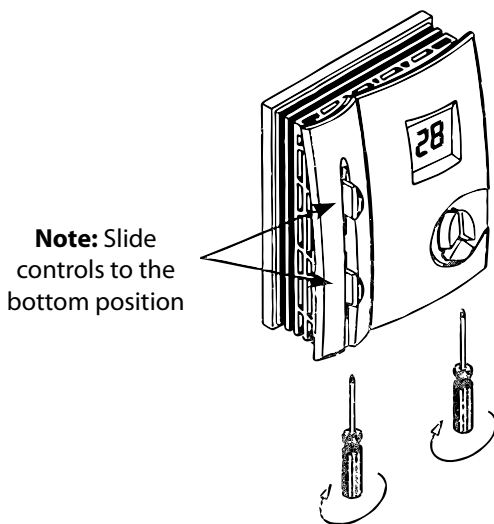


Figure 2

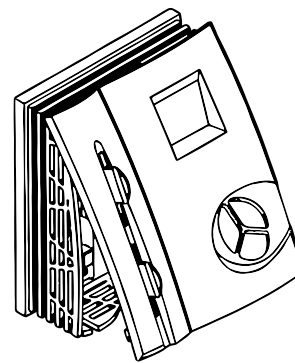


Figure 3

3. Carefully remove the cover as shown in figure Figure 3.

Mounting Without a Wall Mount Plate

1. Make sure the humidistat electrical is unplugged before installing the unit.
2. Position the back half of the humidistat cabinet on the wall or junction box and ensure it is level and covers the junction box completely.
3. Pull the electrical wires through the hole at the terminal block of the humidistat.
4. Drill holes in the wall through the 2 mounting holes in the back of the humidistat cabinet as shown in Figure 4 and insert anchors into the holes.
5. Fasten the humidistat to the wall with screws through the mounting holes.

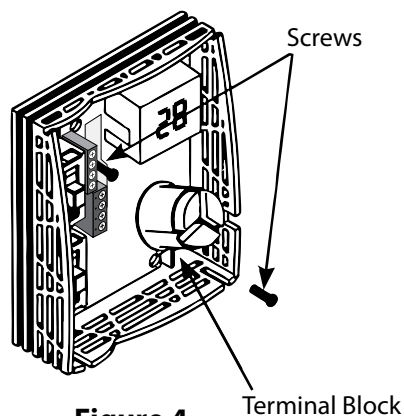


Figure 4

HUMIDISTAT INSTALLATION

Mounting With a Wall Mount Plate

1. Make sure the humidistat is unplugged before installing the unit.
2. Position the wall mount plate on the wall or junction box and ensure the plate is level and covers the junction box completely.
3. Pull the electrical wires through the hole in the wall mount plate.
4. Drill holes in the wall through the 2 mounting holes in the back of the wall plate as shown in **Figure 5** and insert anchors into the holes.
5. Pull the electrical wires through the hole at the terminal block.
6. Fasten the wall plate with 2 screws through the mounting holes.
7. Then fasten the humidistat to the wall plate with screws through the mounting holes.

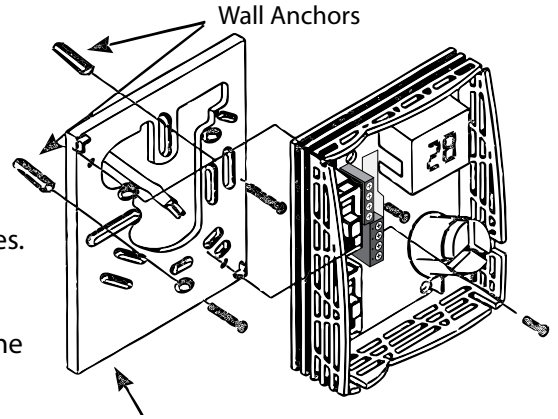


Figure 5

Electrical Connection

1. Connect the electrical wires to the corresponding terminals on the terminal block following the circuit diagram inside the top cover of the unit. **See Figure 6**
2. Connect the white wire to the N terminal, the red wire to the 1 terminal, and the black wire to the L terminal on the humidistat.

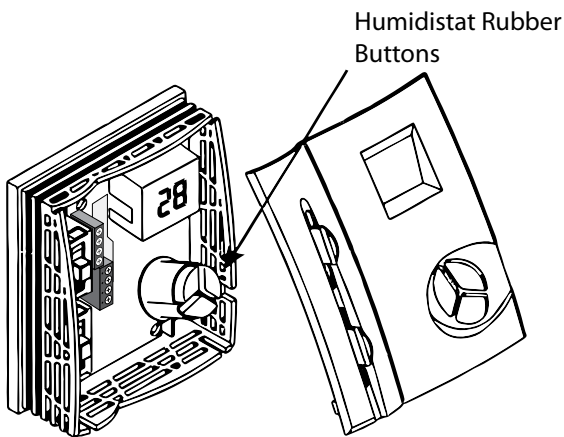


Figure 7 – Make sure the rubber buttons align with the holes in the cover.

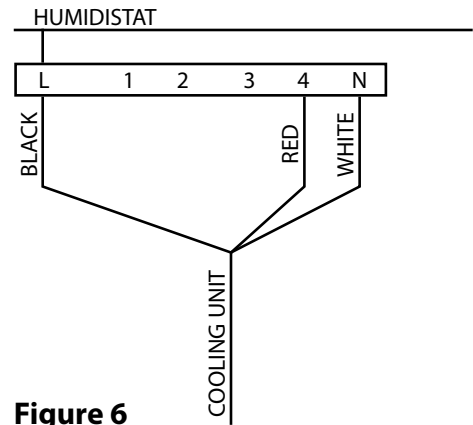


Figure 6

Reattaching the Cover

1. Move both slide controls to the bottom position.
2. Align the humidistat rubber buttons with the holes in the cover as shown in **Figure 7**.

NOTE: If the controls are not lined up when the faceplate is being reattached, then the controls may become stuck. In order to reattach the faceplate correctly move the slide controls to the bottom position to line up them up.

3. Carefully attach the top cover. Ensure the cover locks in place by pushing down on the top of the faceplate and then pushing inward toward the wall.
4. Attach the screws at the bottom of the cover and tighten into place as shown in **Figure 8**.

Correct Humidistat Settings

1. Use the "UP" or "DOWN" arrow to reach the desired humidity level on the display and press "ENTER".
2. Set the top selector switch to the "HUMID" setting.
3. Set the bottom selector switch to the "OFF" setting.


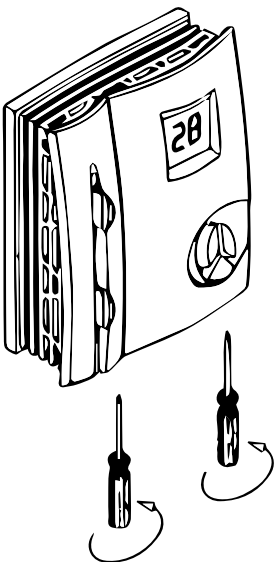


Figure 8

CEILING MOUNT WIRING DIAGRAM

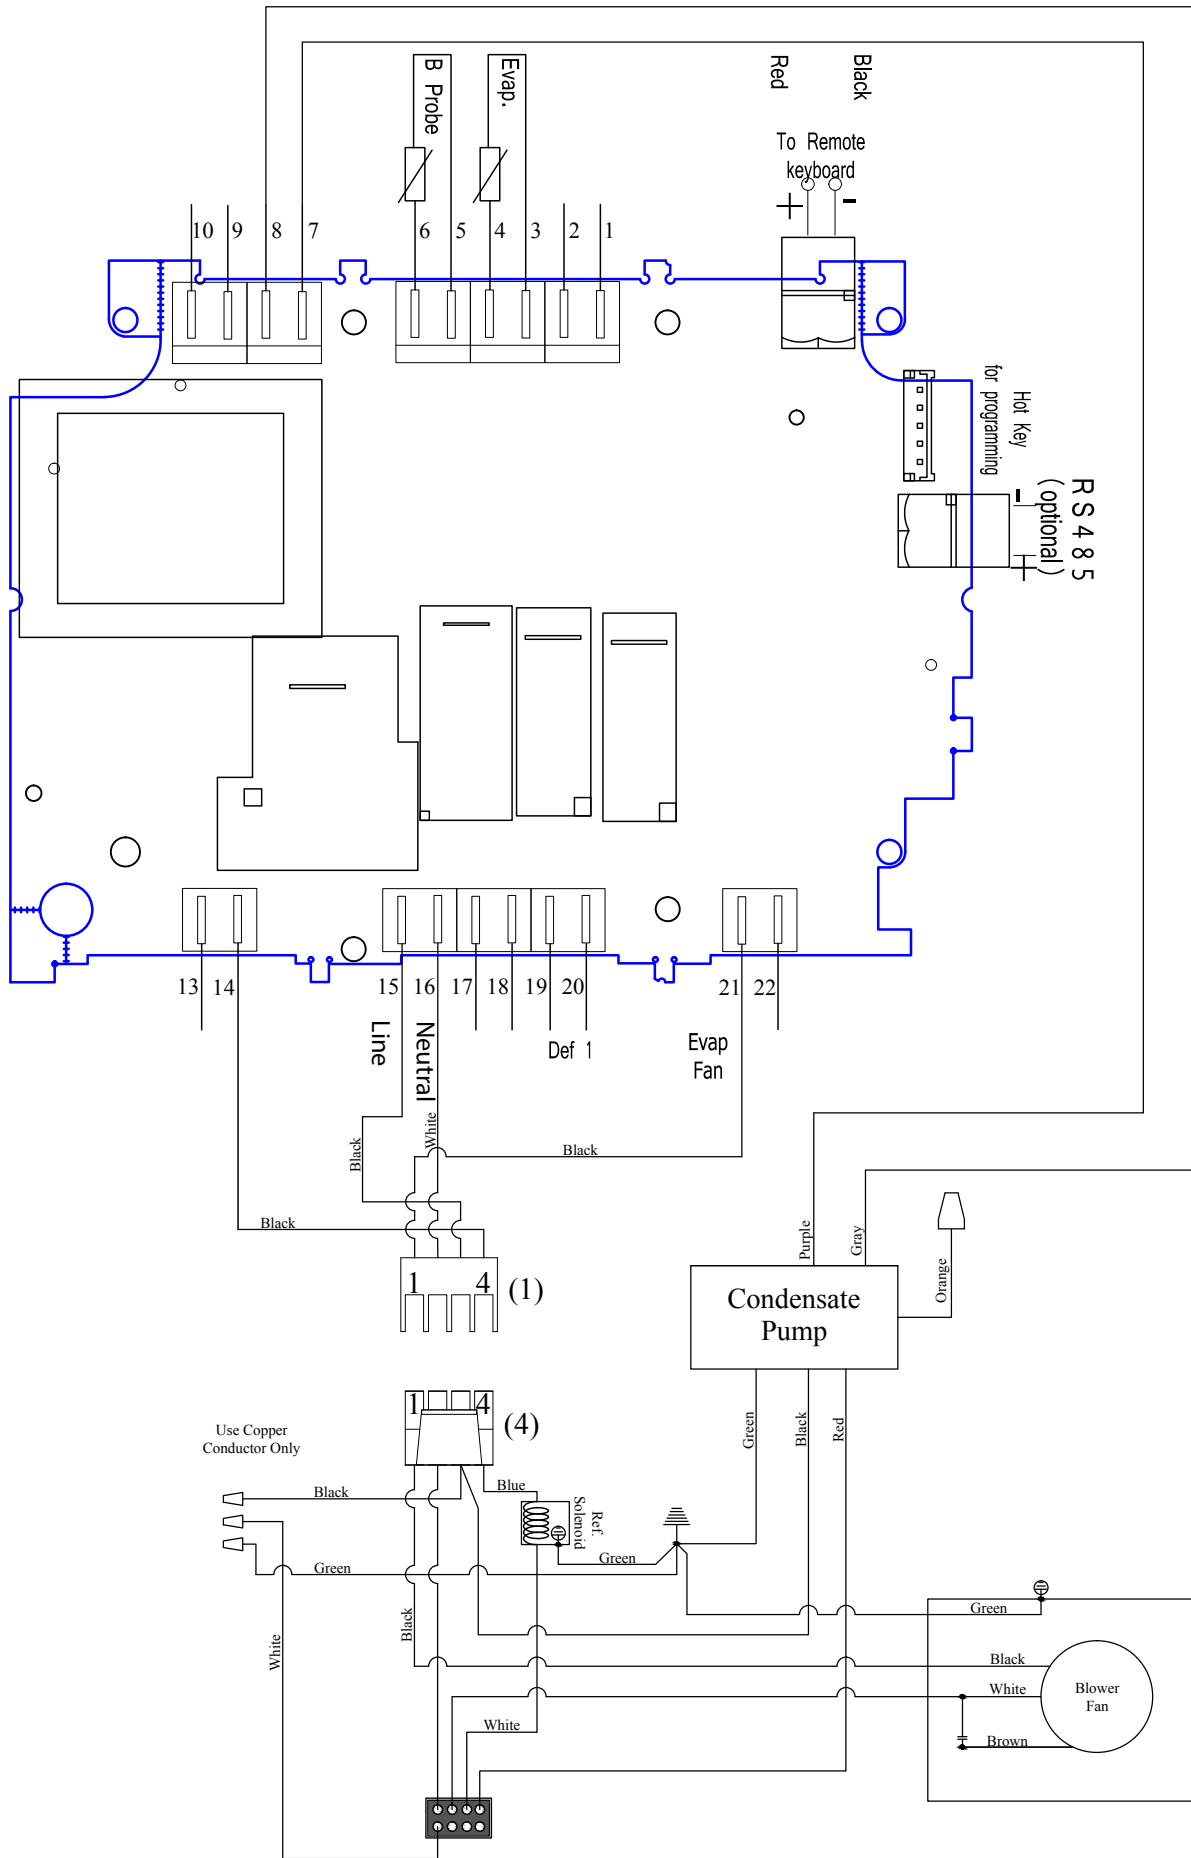


CEILING MOUNT 4000 CONDENSING UNIT WIRING DIAGRAM

LEGEND:
TERMINAL BOARD

BD #	SERVES	COLOR
1	GROUND	GREEN UK GREEN/YELLOW STRIPE
2	L1-115V-HOT	BLACK RED UK-CAN
3	115V-NEUTRAL	WHITE BLUE UK
4	CC HEATER	BLACK
5	COMP GND	GREEN
6	H-COMP	BLACK/RED
7	N-COMP	WHITE
8	N-COND FAN	WHITE
9	H-LP-HP	BLACK
10	LOAD TD&CC	YELLOW

TD=TIME DELAY, DELAY ON BREAK

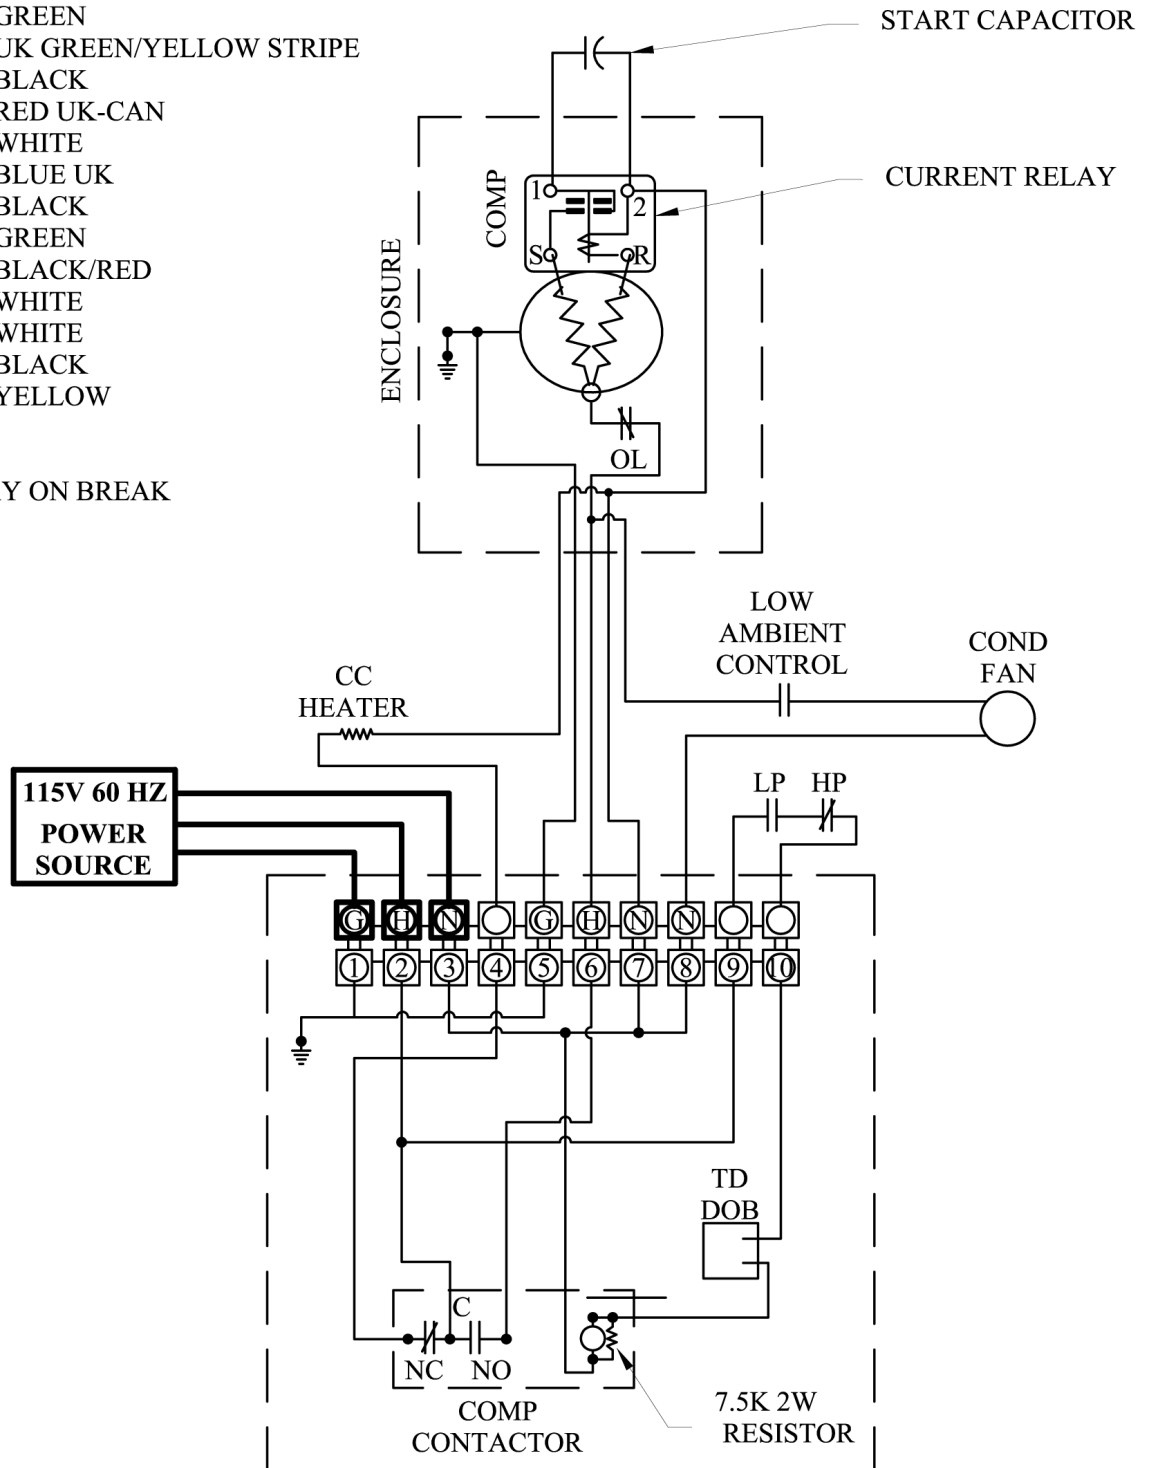


CEILING MOUNT 8000 CONDENSING UNIT WIRING DIAGRAM


LEGEND:
TERMINAL BOARD

<u>BD #</u>	<u>SERVES</u>	<u>COLOR</u>
1	GROUND	GREEN UK GREEN/YELLOW STRIPE
2	L1-115V-HOT	BLACK RED UK-CAN
3	115V-NEUTRAL	WHITE BLUE UK
4	CC HEATER	BLACK
5	COMP GND	GREEN
6	H-COMP	BLACK
7	N-COMP	WHITE
8	H-COND FAN	BLACK
9	LINE H-LP-HP	BLACK
10	LOAD H-LP-HP	BLUE

TD=TIME DELAY, DELAY ON BREAK

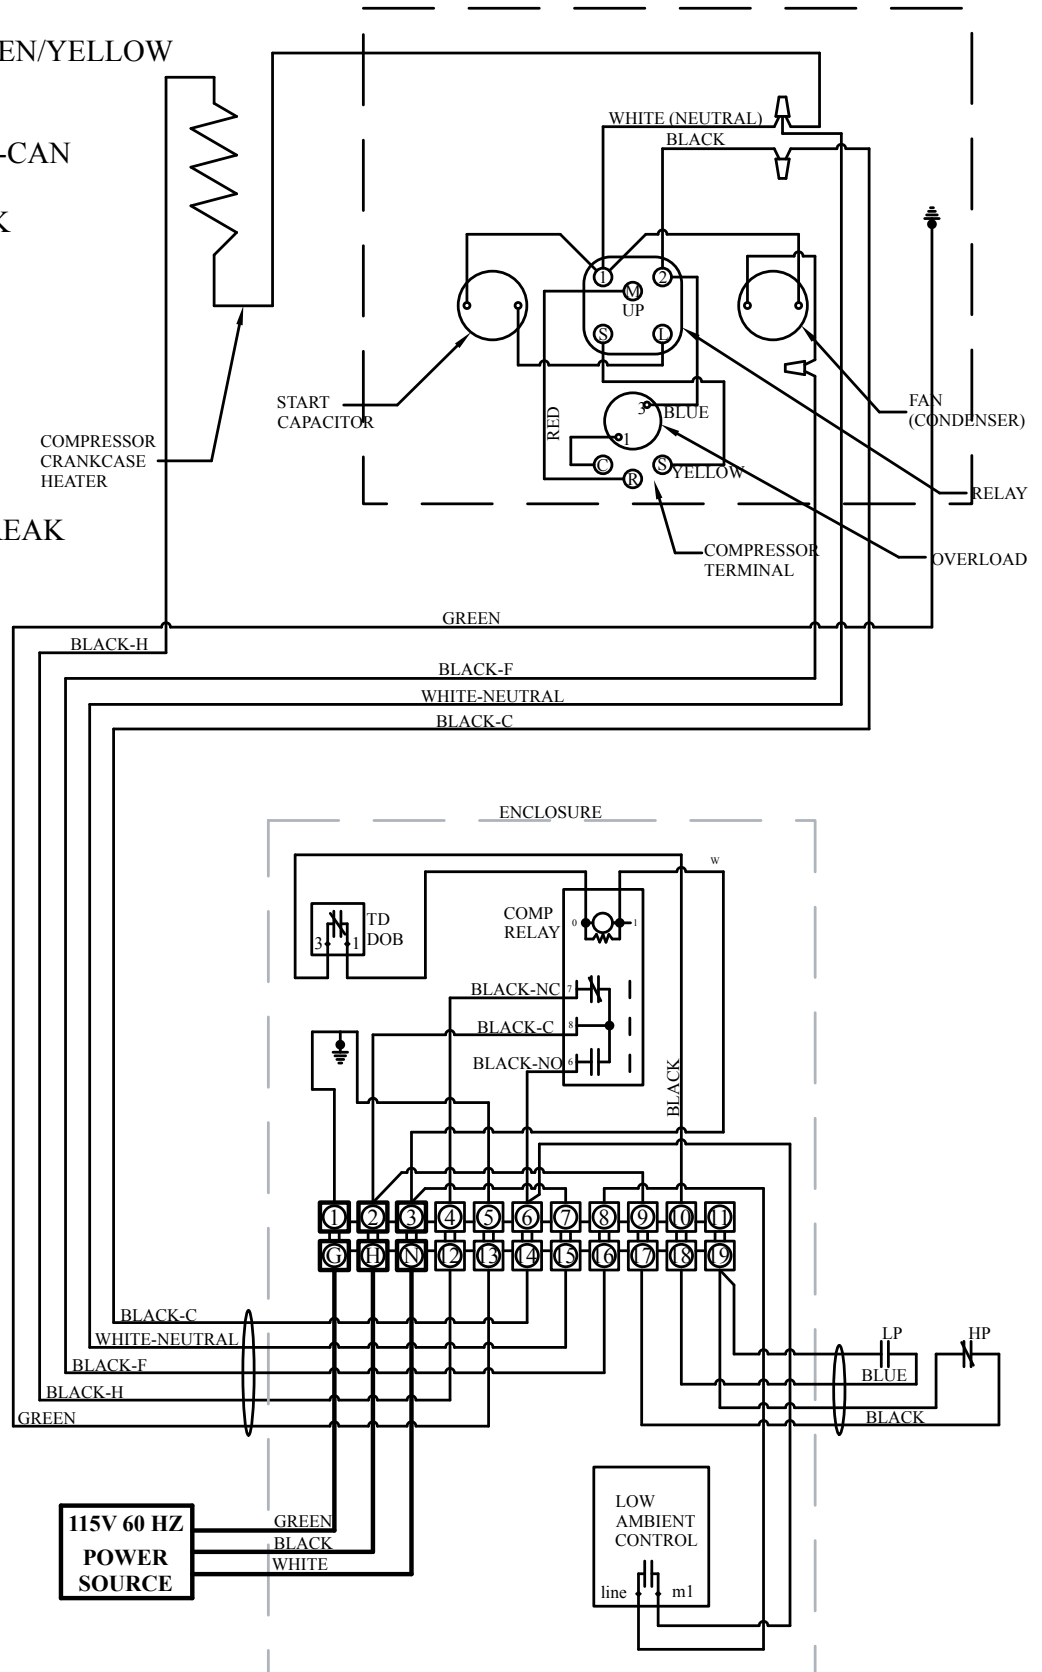

INSTALLING THE CONDENSING UNIT

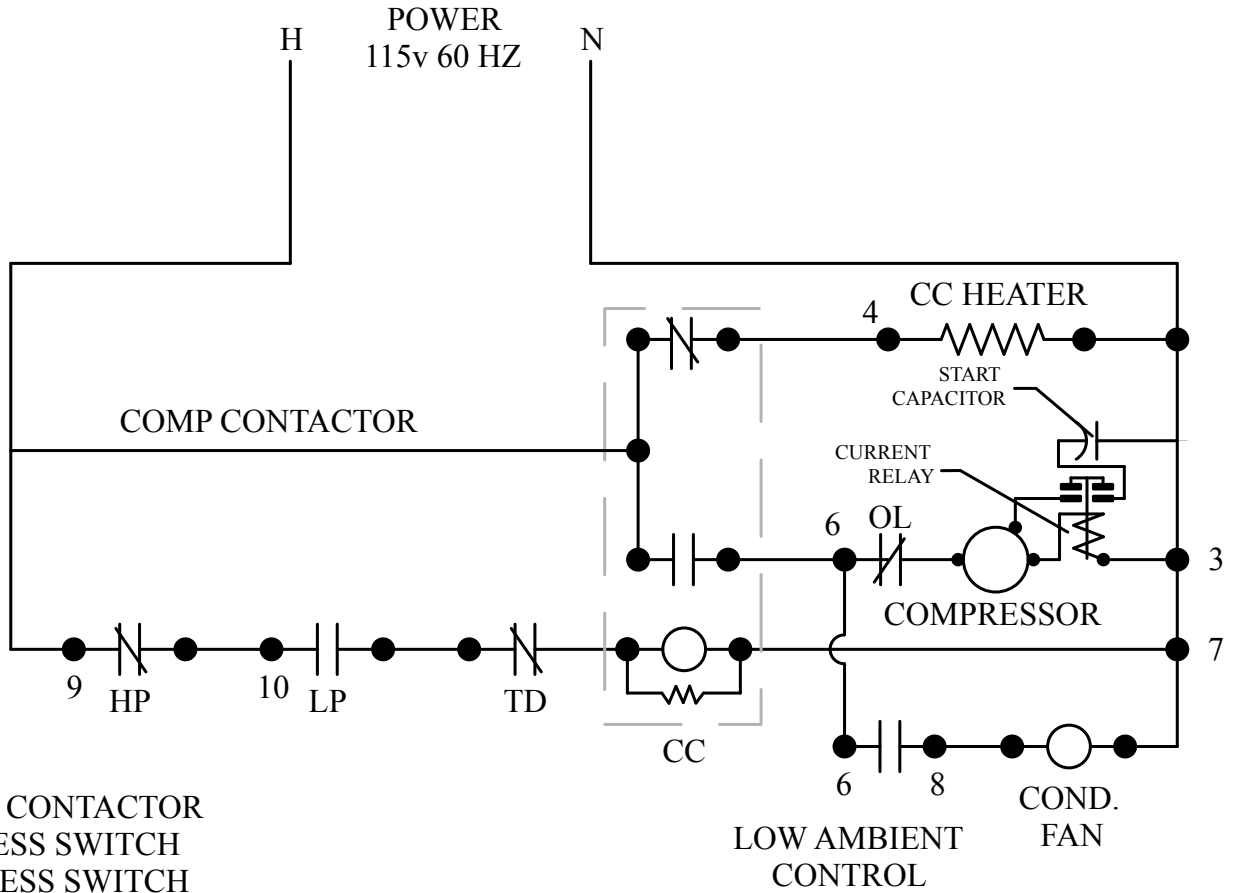

- CC COMP CONTACTOR
- HP HI PRESS SWITCH
- LP LO PRESS SWITCH
- TD TIME DELAY

PREPARING THE CONDENSING UNIT

Electrical Needs

The condensing unit requires a dedicated 115 volt 20 amp circuit. The unit draws a large inrush current for about one second the instant the compressor starts. With a dedicated circuit and circuit breaker, the condensing unit will have sufficient power for effective operation. (The compressor is controlled by a low-pressure switch mounted on the condensing unit. This feature eliminates the need for wiring between the evaporator unit (fan coil unit) and the condensing unit.)

- Ensure the voltage supplied matches the rating specified on the unit spec label.
- Provide a non GFI dedicated circuit and an appropriate outlet for the evaporator unit.
- Provide a dedicated circuit and circuit breaker for the condensing unit.
- Provide a weatherproof disconnect for condensing unit located outside.

As with all sensitive electrical equipment, damage may be caused in the event of power surges and spikes. WhisperKOOL recommends plugging the unit into a surge protector or power conditioner in order to protect your system. As outlined in our terms and conditions, power surges and spikes are not covered under warranty.

WE RECOMMEND THAT YOU DO NOT USE A GROUND FAULT INTERRUPTER (GFI) WITH THIS PRODUCT.


In case the system should lose power, check the home/main circuit breaker. If the system does not respond properly, refer to the Troubleshooting section on page 48.

Low Ambient Control (Cold Weather Start)


All WhisperKOOL split systems come equipped with a compressor heater and fan regulator switch allowing the condensing unit to operate when the ambient temperature is as low as 20°F. The heater serves to prevent liquid refrigerant from entering the compressor while the system is not running. In addition, in cold weather conditions, the heater keeps the condenser warm which helps to operate the system. The fan cycling switch will prevent the fan from operating if the pressure is too low allowing the system to warm up to the needed temperature to operate effectively. When the low ambient temperature is below 20°F an extra heat source kit is necessary to allow the condensing unit to start up.

CONDENSING UNIT QUICK REFERENCE GUIDE

Ceiling Mount 4000 Condensing Unit

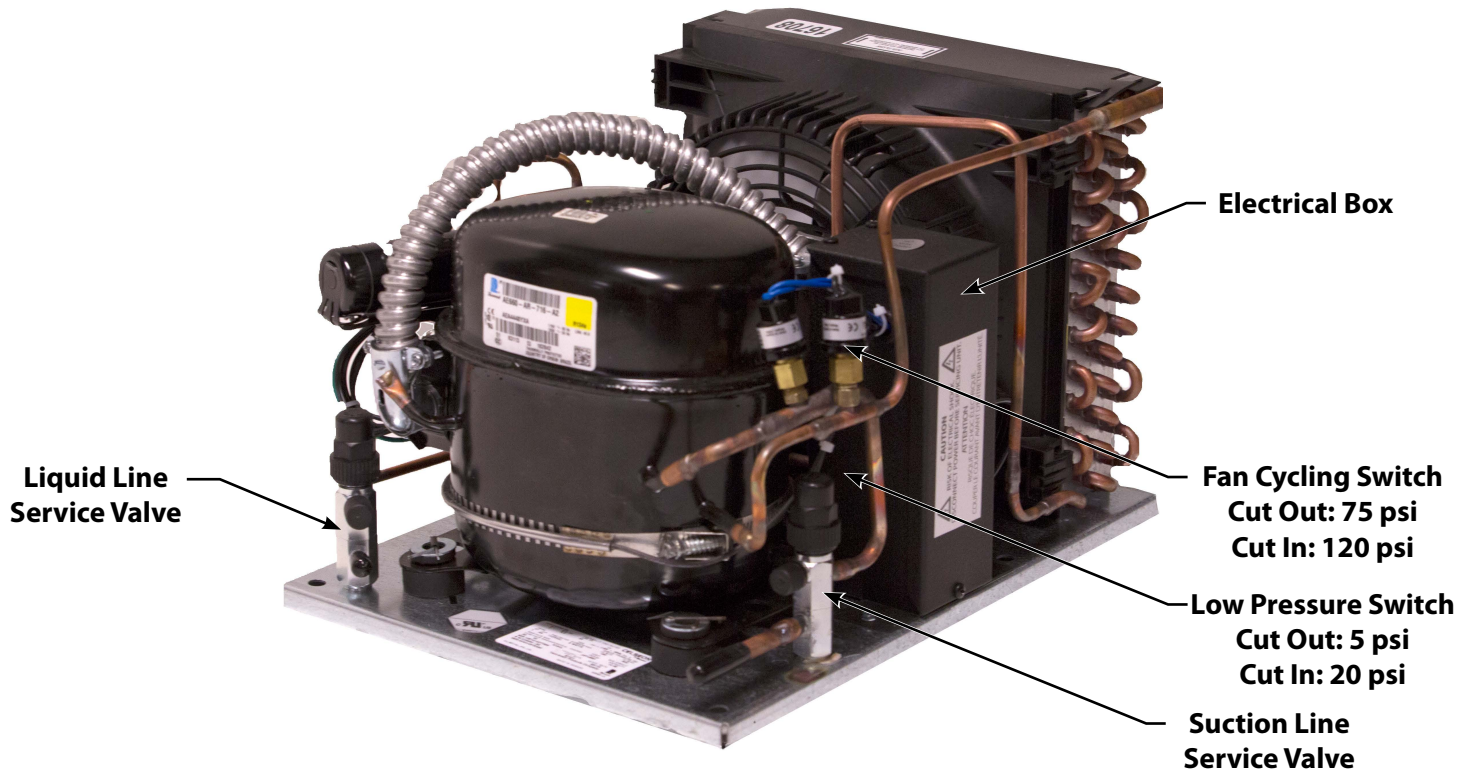

Ceiling Mount 8000 Condensing Unit

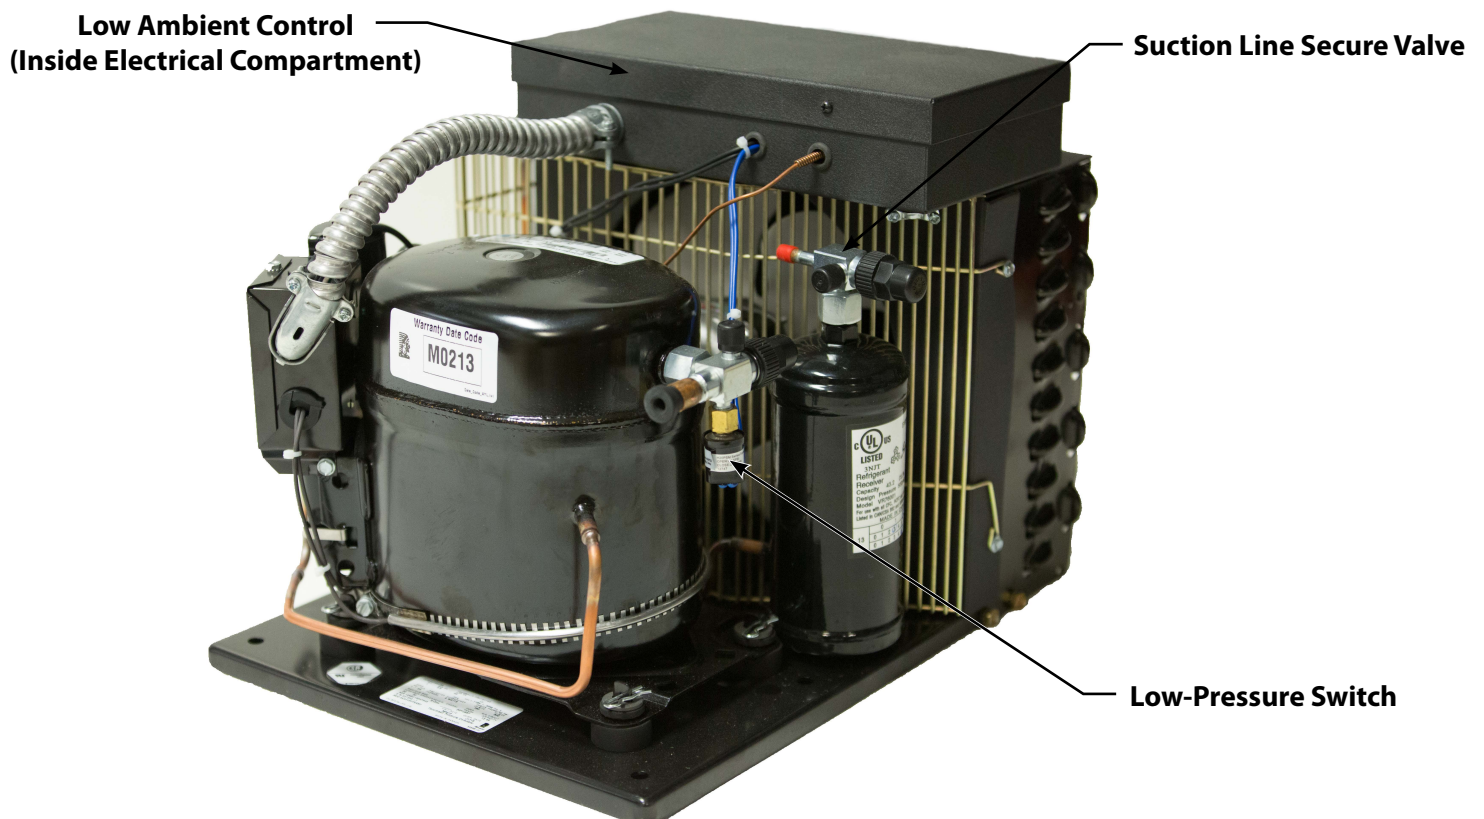

PREPARING THE CONDENSING UNIT (continued)

Installing the Condensing Unit

The condensing unit can be installed inside a well-ventilated area of the home, but is typically installed outside. Exterior applications will require the use of a protective housing, and the amount of sun exposure should be considered when selecting the placement of the condensing unit. The condensing unit requires a dedicated 20 amp circuit (non-GFI). Make sure there is a minimum three-foot horizontal clearance in the front and rear of the unit. The unit may either be hard wired or plug-in, depending on local electrical codes.

Inside Condensing Unit Installations: Inside installations require special consideration, as there must be adequate ventilation to remove the heat created during normal operations. An exhaust port with fan may need to be installed to ensure that heat is effectively removed from the utility room. A return grille or provision for 500 - 600 cfm of cool air to enter the room to replace the exhausted air will accomplish this. Unobstructed airflow to and from the unit is a critical factor in the unit's overall performance. Make sure there is a minimum three-foot horizontal clearance in the front and rear of the condensing unit and at least one foot on each side. This will assure that the unit can move the air around the room in an efficient manner.

Outdoor Condensing Unit Installations: You must utilize the exterior condensing unit housing for outdoor installations. Place the condensing unit on a solid foundation in a location with adequate ventilation. There should be three feet of clearance in the front and rear of the unit and one foot on each side. The unit should be elevated 18 inches in order to avoid any possible flooding or damage by animals, and should be clear of leaves, dirt, and other debris.


INSTALLING THE CONDENSING UNIT

Wiring Procedures Ceiling Mount 4000

1. Locate or install an electrical outlet near the condensing unit.
2. Plug the condensing unit's power cord into the electrical outlet.
3. Leave the circuit breaker off until the unit is ready to charge.

Note: Do not apply power to a system without refrigerant.

Ceiling Mount 4000 Wiring

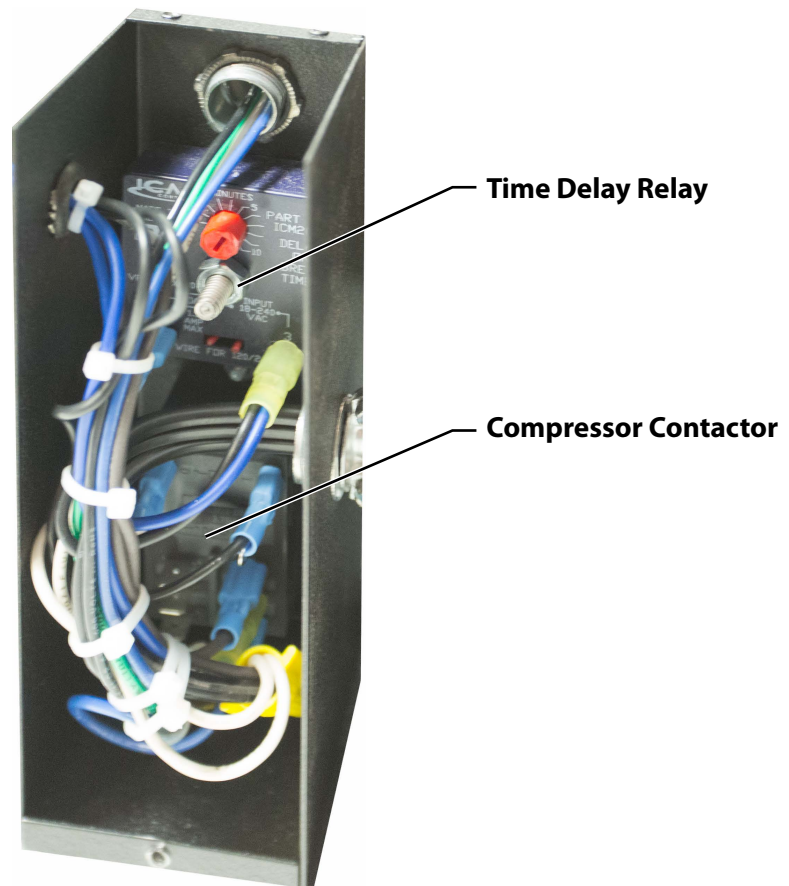


INSTALLING THE CONDENSING UNIT

Wiring Procedures Ceiling Mount 8000

1. Route 14 AWG copper wiring to the condensing unit.
2. Remove screw securing the cover to the electrical box. Remove the top cover of the electrical box.
3. Route the wiring through the strain relief in the side of the electrical box and to the terminal block.
4. Tighten the strain relief to secure the wires.
5. Wire the unit as shown in the image below.
6. Verify that the Johnson Control is set for 170 PSIG cut-in and 70 PSIG differential. This may need to be adjusted based on your ambient temperatures.
7. Verify that the time delay relay is set for 5 minutes.
8. Leave the circuit breaker off until the unit is ready to charge. Do not apply power to a system without refrigerant.

Ceiling Mount 8000 Wiring

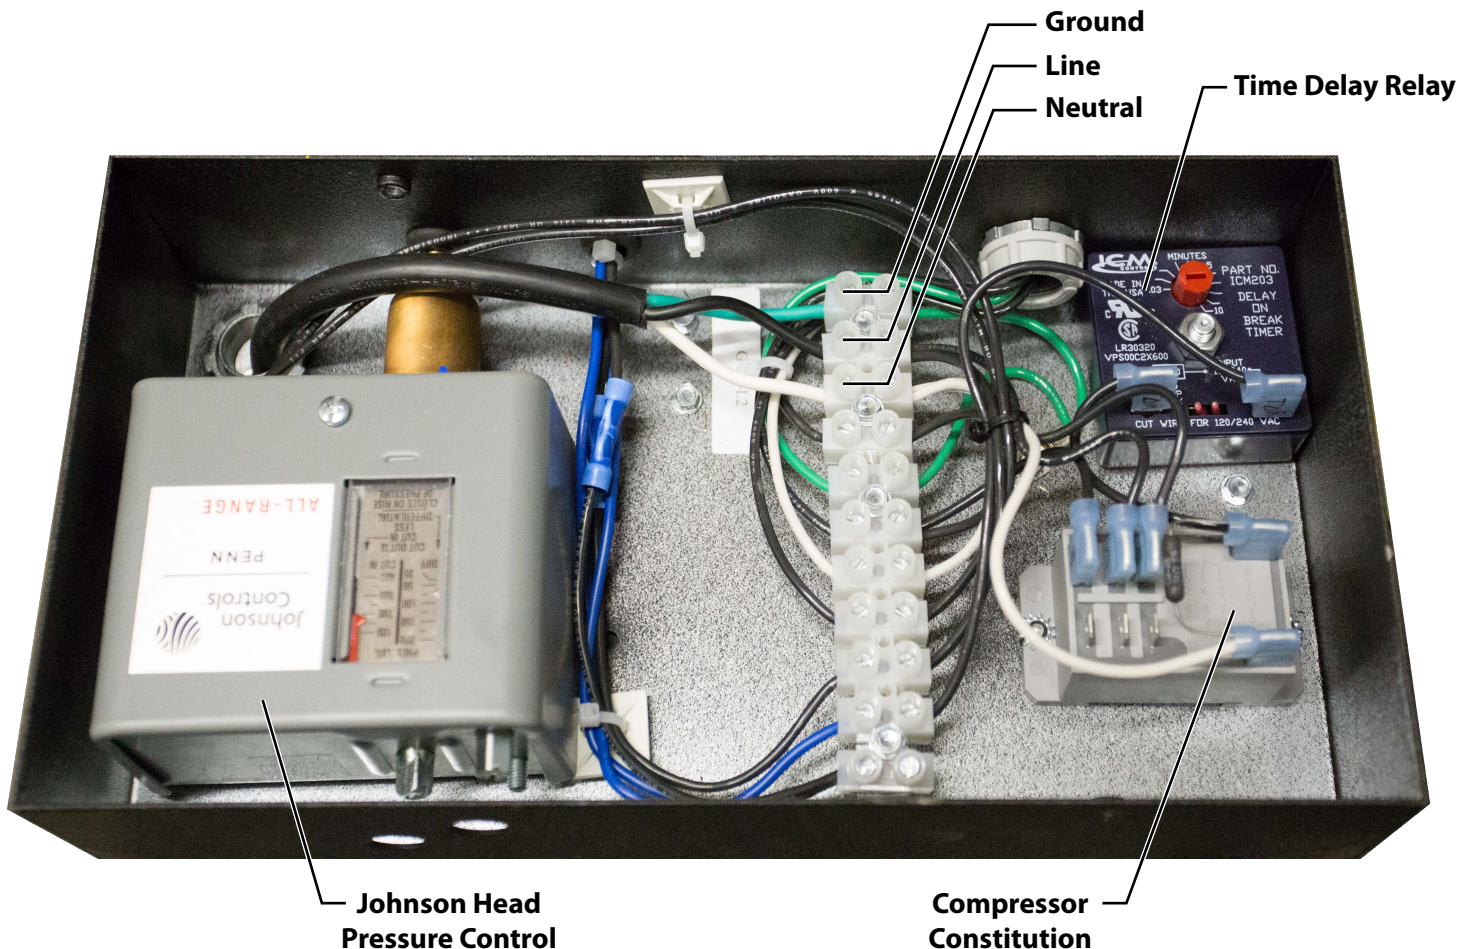


LINE SET PIPING DIAGRAMS

SINGLE FAN COIL PIPING SYSTEM

CONDITION: CONDENSING UNIT BELOW OR CLOSE TO SAME ELEVATION AS FAN COIL UNITS

Option 1

These are two options for running the line set from the coil to the condensing unit. Option 1 is specifically for when the system is installed with the condensing unit below or leveled to the coil. Option 2 is for when the system is installed with the condensing unit at a higher elevation than the coil.

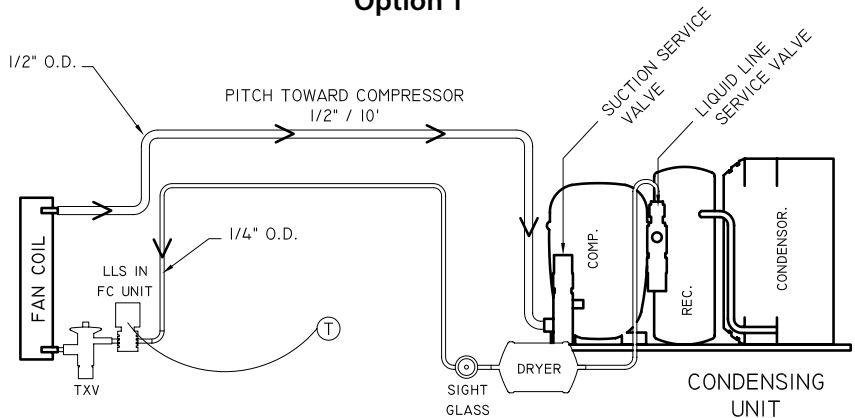


SINGLE FAN COIL PIPING SYSTEM

RECOMMENDED REFRIGERANT PIPING DESIGN FOR CONVENTIONAL FACTORY SUPPLIED FAN COIL AND AIR COOLED CONDENSING UNIT COMPONENTS. REFRIGERANT LINE LENGTHS IN EXCESS OF 90' NOT RECOMMENDED.

THIS DRAWING APPLIES TO CONDENSING UNIT LOCATION AT OR BELOW THE ELEVATION OF THE FAN COIL UNIT. SUCTION PIPE TO BE INSULATED WITH 1/2" WALL INSULATION (ARMAFLEX BRAND) OR EQUAL.

SINGLE FAN COIL PIPING SYSTEM
CONDITION: CONDENSING UNIT ABOVE FAN COILS AND VERTICAL PIPES HAVE GREATER THAN 3' RISE.

Option 2

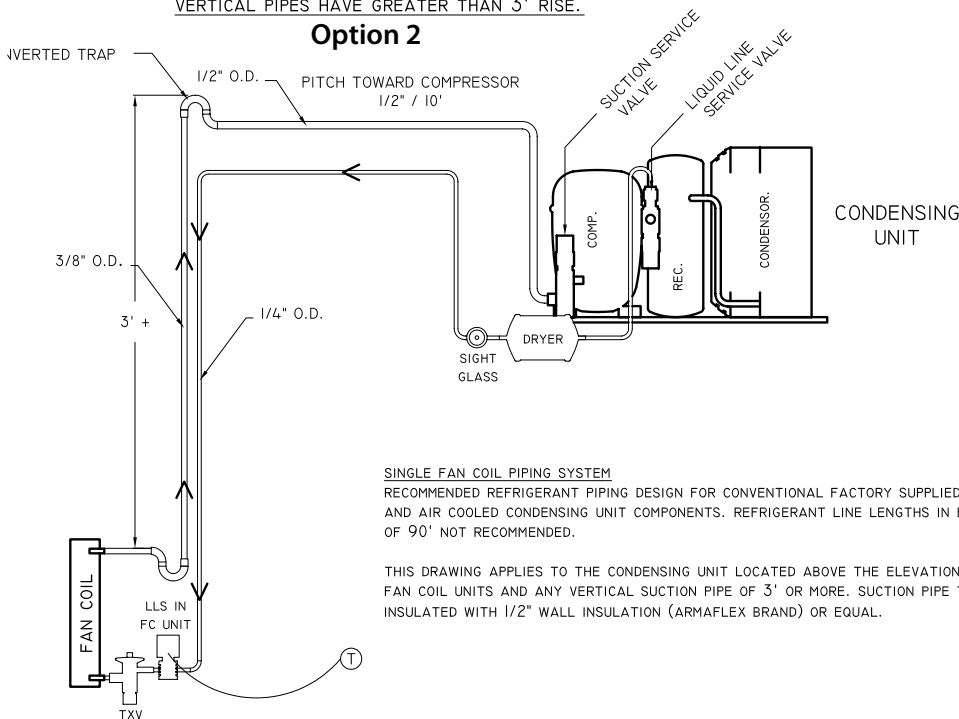

SINGLE FAN COIL PIPING SYSTEM

RECOMMENDED REFRIGERANT PIPING DESIGN FOR CONVENTIONAL FACTORY SUPPLIED FAN COIL AND AIR COOLED CONDENSING UNIT COMPONENTS. REFRIGERANT LINE LENGTHS IN EXCESS OF 90' NOT RECOMMENDED.

THIS DRAWING APPLIES TO THE CONDENSING UNIT LOCATED ABOVE THE ELEVATION OF THE FAN COIL UNITS AND ANY VERTICAL SUCTION PIPE OF 3' OR MORE. SUCTION PIPE TO BE INSULATED WITH 1/2" WALL INSULATION (ARMAFLEX BRAND) OR EQUAL.

LEGEND

LLS	Liquid Line Solenoid
TXV	Thermal Expansion Valve
COMP	Compressor
REC	Receiver
EVAP.	Evaporator
O.D.	Outer Diameter

It is required to size the suction line tubing according to this chart.

Model	Line Set Length	<25 ft.			26-50 ft.			50-100 ft.		
		<3 ft.	3-10 ft.	>10 ft.	<3 ft.	3-10 ft.	>10 ft.	<3 ft.	3-10 ft.	>10 ft.
Ceiling Mount 4000	Horizontal Tubing	1/2"						5/8"		
	Vertical Rise	3/8"						5/8"	5/8"	1/2"
Ceiling Mount 8000	Horizontal Tubing	1/2"			5/8"					
	Vertical Rise	1/2"								

INSTALLING THE CONDENSING UNIT

Refrigerant Piping Overview

- Using the charts and illustrations found on previous pages, route the line set between the evaporator unit and condensing unit. Be sure to reference the chart for correct line set sizing. All horizontal suction piping should be pitched toward the condensing unit $\frac{1}{2}$ " for every 10' of pipe. When installing and routing the line set, cap both ends of each tube to prevent debris from entering the tubing.
- Prior to connecting the piping to the evaporator and condensing units, loosely connect a refrigerant manifold to the suction and liquid line service valves.
 - Purge the hoses with dry nitrogen and tighten the hose connections.
 - Remove the service valve caps and turn the valve stem clockwise $\frac{1}{2}$ turn to unseat the valve and open the service port. Keep the piping ports sealed until ready to braze.
- Purge dry nitrogen through the fittings at a slow rate to prevent formation of highly abrasive copper oxide.
- Perform all brazes.
- Pressure test the system and check for leaks.
- Insulate the suction line using $\frac{1}{2}$ " wall cellular insulation or equivalent. Seal all seams with Armaflex 520 Foam Insulation Adhesive or equivalent. Wrap each seam using line set tape.

Liquid Line Piping Procedure

- $\frac{1}{4}$ " OD copper tubing is required for the liquid line on all systems.
- Braze a short piece of $\frac{1}{4}$ " copper tubing to the liquid line service valve.
- Connect the supplied refrigerant drier to the tubing.
- Downstream from the drier, connect the moisture indicating sight glass in an easily visible location.
- Run the tubing to the evaporator unit (fan coil unit) and attach to the liquid line connection on the evaporator unit (fan coil unit).

Suction Piping Procedure

- Install an access valve at the outlet of the evaporator unit (fan coil unit).
- Connect an appropriately sized suction line to the suction line service valve on the condensing unit.
- Run the pre-insulated suction line to the evaporator unit (fan coil unit) and attach to the suction line connection on the evaporator unit (fan coil unit).

Brazing Procedure

- Connect the bottle probe to the evaporator unit (fan coil unit).
- Fill a wine bottle $\frac{3}{4}$ full of room temperature water. Insert the bottle probe into the neck of the bottle as far as possible. It is important that the bottle probe stopper be compressed by the neck of the bottle to ensure water will not leak.
- Energize the evaporator unit (fan coil unit) and set the controller to call for cooling.
- Verify that the set point on the control is set low enough to allow the unit to run for the entire length of the brazing, evacuation, and charging procedure.
- Remove the valve depressors from the gauge hoses on a four-valve manifold.
- Connect the manifold to the low-pressure service valve port on the condensing unit and a nitrogen tank.
- Open the suction line service valve and purge nitrogen through the system.
- Braze all connections and cool off quickly.
- Cap the access valve on the suction line.
- Connect the high-pressure hose from the manifold to the liquid line service valve port.
- Pressure test the system at 150 psi for 20 minutes.
- Check all braze joints with leak detector or soap bubbles.
- Release the nitrogen once it is confirmed that there are no leaks.

INSTALLING THE CONDENSING UNIT

Evacuation

- Remove the nitrogen tank from the manifold and attach the manifold to the refrigerant tank.
- Install a micron gauge onto the access valve near the evaporator unit (fan coil unit).
- Mid seat both service valves.
- Install service caps on the valves.
- Energize the liquid line solenoid valve.
- After confirming there is fresh oil in the vacuum pump, connect the 3/8" hose from the manifold to the pump.
- Start the pump and run until the micron gauge at the evaporator unit (fan coil unit) reads 200 microns or less.
- Disconnect the vacuum pump from the system.
- Break the vacuum by pressurizing the system to approximately 5 PSI with R-134a.
- Remove the micron gauge from the access valve.


Charging

- Install a low-pressure gauge on the access valve near the evaporator unit (fan coil unit).
- With the power off to the condensing unit, admit liquid refrigerant through the liquid line service valve until the refrigerant stops flowing.
- Turn on the circuit breaker for the condensing unit. The compressor should turn on if the pressure in the suction line is above 20 psi.
- Add refrigerant as a vapor through the low side of the system.
- Observe the sight glass. If bubbles are present, add more refrigerant in vapor form to the low side.
- Once the sight glass is clear, check the superheat at the outlet of the evaporator unit (fan coil unit). Adjust the TXV until the superheat is between 8-12 degrees.
 - If TXV adjustment is necessary, remove the drip tray on the evaporator unit to access the TXV from the cellar. The drip tray is secured to the wrapper with two screws. Once the screws are removed the drip tray will slide down and out of the evaporator unit.
- Under normal operation, with the wine cellar at 55° and the ambient temperature at 85°, the low side pressure should be between 28-32 PSI and the high side should be between 170-180 PSI.

Finalizing the Installation

- Confirm that the entire suction line from the TXV to the suction line service valve is insulated using 1/2" wall cellular insulation or equivalent. Seal all seams with Armaflex 520 Foam Insulation Adhesive or equivalent.
- Reinstall the drip tray and Front Access Panel.
- Confirm that the control is displaying the correct temperature and that no alarms are present. Refer to page 45 for corrective action if alarms are present.

FINALIZING THE INSTALLATION

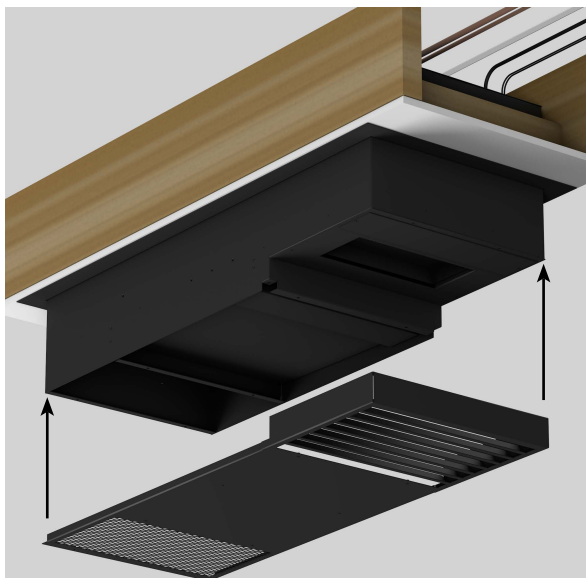

1. Push the Grille Back into place. This will attach the grille to the ball studs.
2. Screw in the eight screws to secure the Front Access Panel.

SYSTEM OPERATION

Initial Start-Up

When power is applied to the unit, the control will briefly display all symbols, and the Snow Flake symbol will be displayed (if unit is calling for cooling). There may be a brief delay prior to the evaporator fan turning on. When the evaporator fan is activated the Fan symbol will be displayed. The temperature control feature for the evaporator fan is a feature applicable to WhisperKOOL. This is the Advance Product Safety Technology (APST), which ensures that in the possible event of a cooling deficiency, the heat from the indoor fan will not raise the temperature of the wine cellar, which could otherwise have an adverse effect on the wine-aging process.

Normal System Cycle

The FON function is an adjustable feature which allows the customer the convenience of reintroducing some of the humidity removed by the fan coil during the cooling process. The FON Function is a feature that controls the evaporator fan operation once the set point has been reached. All units are shipped with the set point of 55°F and a differential of 1°F. All units come with this feature turned off. If low humidity is a problem an increase in this setting will raise the humidity level. The FON function is one of the many Customer Preference Selection features that allow the customer the ability to fine-tune the controls.

Anti-Short Cycle

The Anti-Short Cycle ensures that the unit will remain off for a period of 5 minutes after the unit has reached the set point to allow the pressure in the refrigeration system to equalize prior to starting the compressor.

Anti-Frost Cycle

The Anti-Frost Cycle is a precautionary measure, as icing or frosting of the coil does not occur during normal operation. The system will go through a defrost cycle every 4 hours. During the defrost cycle, the indoor fan will provide airflow across the indoor coil, which will evaporate any frost accumulation.

Low Ambient Conditions

If the condensing unit is installed outside (which will allow the condenser to be exposed to low ambient temperatures), the condenser fan may cycle on and off. The purpose of the fan cycling is to maintain the system high side pressure, which will ensure an adequate refrigeration process. The fan cycling process is accomplished by way of a Johnson Control or fan cycling switch attached to the condensing unit.

Bottle Probe Failure Protection In the event that a bottle probe should fail, the APST (Advance Product Safety Technology) will automatically transition the Refrigeration Compressor cycles to a predetermined time series (based on detailed laboratory testing), which will ensure that the product is kept within the safe range.






Remote Keypad (standard on ducted units)


The remote keypad is designed to give the user the ability to monitor and change cellar conditions when the evaporating unit is placed in a remote location outside of the cellar.

CONTROLLER FUNCTIONS



TEMPERATURE

Button	Normal Functions
<p>ON/OFF</p> 	<ul style="list-style-type: none"> The ON/OFF button allows the customer the convenience of turning the refrigeration system ON or OFF from the control panel. This feature does not disconnect power from the unit. In order for the power to be shut off from the unit, the power cord must be unplugged from the wall receptacle. Press the ON/OFF button once for button application.
<p>Up and Down Arrows</p>  	<ul style="list-style-type: none"> Use these buttons to scroll up or down the CPSM (Customer Preference Selection Mode) menu. Displays the highest and lowest temperature sensed by the bottle probe. This feature allows the customer instant access to the recorded data applicable to the bottle probe Temperatures. It can be easily reset to reflect current temperatures. <ol style="list-style-type: none"> Press the "UP" arrow, or the "DOWN" arrow once, and the highest or lowest temperature (Hi/Lo) sensed by the bottle probe will be displayed. To reset the Hi/Lo, press and hold the "Set" button when the Hi/Lo value is displayed on the Digital Display, continue to hold the "Set" button until "rst" appears on the digital display and then blinks. This will erase the past-recorded "Temperature Data History" and start recording from the current time and temperature forward. Temperatures displayed would reflect bottle probe temperatures from that point in time and beyond. The Hi/Lo feature should be reset at initial "Start-Up" and after the cellar has obtained normal operating temperatures, which is generally 55°F.
<p>Cellar PreChill (CPC)</p>  	<p>The CPC feature is activated by pressing the "UP" arrow for 3-5 seconds, and the CPC logo will be displayed on the digital display. The CPC feature can be terminated by pressing the "UP" arrow for 3-5 seconds, or the feature will self terminate after 6 hrs.</p> <ol style="list-style-type: none"> The CPC feature may be used to Pre-Chill the cellar prior to loading it with warm product. The feature will shift the Set Point down to a lower setting of 52°F for the next 6 hours. After the 6 hour time period the set point will automatically return to the original Set Point. The CPC feature can be conveniently adjusted to the customer's specific needs by accessing the "Customer Preference Select Mode" (CPSM). See Customer Preference Select Mode Instructions.

SET	<p>Set</p> <ol style="list-style-type: none"> 1. Press the “Set” button once and it will display the set point. After approximately 5 seconds, the display will return to normal operation and display the bottle probe temperature. 2. Press the “Set” button once and it will display the set point. Press the “UP” and “DOWN” arrows to change the set point. Press the “Set” button again and the numbers will blink, confirming the change in set point. 3. Press and hold the “Set” button during the display of the Hi/Low “Temperature Data History” (hold button unit “rst” blinks on display), and it will erase the past recorded data file and start recording from the current time and temperature. 4. Press the “Set” and the “DOWN” buttons simultaneously, for 3-5 seconds, and you will access the “Customer Preference Selection Mode” (CPSM). The CPSM allows the customer to fine-tune the Control Operating System to their applicable choice.
	<p>Alarm</p> <p>The Alarm symbol is shown when the unit encounters an issue that needs attention. The displayed alarm codes are explained below.</p>

Alarm Codes

Message	Cause	Solution
“P1”	Bottle probe is unplugged	Attach bottle probe to unit
	Faulty bottle probe connection	<ol style="list-style-type: none"> 1. Check bottle probe attachment at circular connector. 2. Check bottle probe connection at green terminal block on back of controller
	Defective bottle probe	Replace the bottle probe
“P2”	Faulty evaporator probe connection	Check evaporator probe connection at green terminal block on back of controller
	Defective evaporator probe	Replace the evaporator probe
“HA”	Defective bottle probe	Replace the bottle probe
“LA”	The bottle probe is sensing a temperature of 4° below the set point	Allow the room to warm up. This will increase the temperature of the wine
	Defective bottle probe	Replace the bottle probe
“POF”	The keypad is locked	Hold “UP” and “DOWN” arrows for 3 to 5 seconds to disable, “PON” should appear
“BAL”	Unit is not draining properly	<ol style="list-style-type: none"> 1. Check the drain line for kinks or obstructions 2. Check the Condensate Pump for proper operation

<p>CPSM Mode</p>	<p>Press the "Set" and the "DOWN" buttons simultaneously, for 3-5 seconds and you will access the "Customer Preference Selection Mode" (CPSM). The CPSM allows the customer to "Fine Tune" the Control Operating System to their applicable choice.</p> <p>The following CPSM options are available for adjustment:</p> <p>Fon – Humidity Management Enhancement: This parameter is normally set at 0, which should provide adequate relative humidity for the cellar.</p> <ul style="list-style-type: none"> • An increase in this parameter will increase the Humidity Enhancement (%RH), and a decrease in the parameter will decrease Humidity Enhancement (%RH). • Adjustments should be made in increments of 5, with a maximum of 15, and a minimum of 0. • After any adjustment to Humidity Enhancement, you should wait a minimum of three days before making any additional adjustments. This will allow the cellar sufficient time to acclimate to the new setting. <p>Fof - Humidity Management Enhancement: This parameter is normally set at 15. This parameter should not be adjusted, as it simply provides an OFF cycle time for the fan during the compressor OFF cycle. However, the parameter is located within the CPSM as a convenience to the customer, should it need to be adjusted. CCT - Cellar Pre-Chill Duration: This parameter is set to 6 hours, but can be changed between 0-23.5 hours.</p> <p>Con/Cof – Compressor On time (Con) and Off time (Cof) with a Probe 1 failure/Alarm. These parameters are set at Con 40 min/Cof 10 min. In the event that there is a Probe 1 failure/ Alarm, the compressor/refrigeration system automatically starts a predetermined ON/OFF cycle, which is controlled by the Con and the Cof parameters. The customer can adjust these parameters to maintain the desired bottle temperature.</p>
-------------------------	---

MAINTENANCE SCHEDULE

Monthly	<ol style="list-style-type: none">1. Check for debris surrounding condensing unit(i.e. leaves, branches, trash ect.). Remove all obstructions.2. Check for unusual noise or vibration.3. Check the drain line to see if it is above the waterline if draining into a vessel.
Quarterly	<ol style="list-style-type: none">1. Use a vacuum with brush attachment to clean the evaporator coil. Be careful not to crush coil fins when cleaning.2. Remove the evaporator filter and clean with warm water.3. Ensure the condensing unit is free of debris and dust.4. Have a certified HVAC Technician service the condensing unit/clean the condenser coil.
Annually	<ol style="list-style-type: none">1. Inspect for corrosion.2. Check wiring connections and integrity of cords.3. Pour a 50/50 bleach solution into the drain line every spring.

TROUBLESHOOTING GUIDE

Unit has ice forming on the evaporator	
Possible Cause	Solution
Evaporator filter or coil is dirty.	Remove the filter and wash, then clean the coil with a vacuum. If coil is very dirty, use a spray bottle with a small amount of liquid dish washing detergent or coil cleaner. Spray coil, let set for 5 min, then flush with fresh water.
There is something blocking the supply and or return air.	Remove blockage.
The evaporator fan is not turning on.	Call a service tech to troubleshoot.
The evaporator unit has not gone through its anti-frost sequence yet.	Check for ice in the depth of the coil. Melt with blow drier until coil is warm to the touch. Soak up water with a towel.
If evaporator unit continues to ice.	Observe ice formation pattern. If only part way up the coil face, the system could be low on refrigerant. If all the way up, the coil may be dirty or airflow is blocked.
Unit does not run/power up	
Possible Cause	Solution
Evaporator unit is not plugged in.	Make sure the unit is plugged into an outlet.
Power switch not on.	Turn unit on by pressing the power button on the control.
Line voltage is incorrect rating for the system.	Check line voltage to make sure there is 110v/120v.
Bottle at set point.	Lower set point.
Thermostat not calling for cooling.	Lower set point.
Faulty thermostat or wiring.	Call Customer Service at 1-800-343-9463
Cellar temperature is to warm	
Possible Cause	Solution
The temperature of the room condensing unit is exhausting and has exceeded 110°F	Intake temperature needs to drop below 85°.
The system is undersized for the cellar.	Order correct size system.
There is something blocking the supply and/or return air on evaporator or condenser side of the unit.	Remove air flow obstruction.
Evaporator unit is mounted too low in the cellar.	Relocate unit so the distance from the ceiling and top of the unit is no more than 18".
One or more of the fans are not turning on.	Please contact the installing technician to troubleshoot.
Compressor is not turning on.	Please contact the installing technician to troubleshoot.
Compressor keeps cycling on overload.	Make sure all fans are working and there is no airflow obstruction.
Poor seal around door or other areas requiring a seal (around the unit, wall joints, etc.).	Make sure there are no air gaps around the door. If door seal is damaged, replace it.
Controller set too high.	Lower the set point.
Evaporator coil is frosted or iced up.	Observe ice formation pattern. If only part way up the coil face, evaporator unit could be low on refrigerant. If so, contact your installing technician to assist with troubleshooting.
System runs constantly	
Possible Cause	Solution
Leaky door seal or poorly insulated cellar.	Fix leaky door seal and insulate cellar in accordance with this manual. (Page 10)

TROUBLESHOOTING GUIDE

Unit leaks water	
Possible Cause	Solution
Evaporator unit is not level.	Evaporator unit should be level in wall to prevent leaking.
Drain line clogged or kinked.	Check drain line to make sure water can flow freely.
Drain is clogged preventing water from escaping.	Disconnect drain and clear out, open access door and check drain for blockage.
Drain line does not have a downward slope.	Fix drain line so there is a downward slope from the unit to the drain.
Coil is iced causing drain pan ice and water overflowing.	Melt ice with blow drier. Soak up with a towel.
Unit runs but does not cool	
Possible Cause	Solution
Lack of air flow.	Make sure fan is unobstructed; Make sure the evaporator filter, evaporator coil, and condenser coil are clean and free of debris.
System undersized.	Call Customer Service at 1-800-343-9463
Compressor is overheating.	Shut system off for 1 hour to allow compressor to cool. Turn back on and check for cooler airflow out. If compressor runs, check for and clean condenser coil as possible cause of compressor overheating. If problem repeats, contact your installing technician to assist with troubleshooting.
Evaporator fan runs but compressor does not	
Possible Cause	Solution
Running an anti-frost cycle.	1) If the system is maintaining the correct cellar temperature and there is a dripping snowflake symbol illuminated on the control, the system is going through an anti-frost cycle. No action Required. 2) If the system is not maintaining the correct cellar temperature, this may be caused by a dirty evaporator filter or coil. 3) Call installing technician to troubleshoot, as the system may be low on charge or an adjustment to the TXV.
Compressor and/or starting components faulty.	Please contact the installing technician to troubleshoot.
System may be performing the WHM function.	Allow cooling system to revert back to cooling mode.
Compressor may have overheated.	Shut system off for 1 hour to allow compressor to cool. Turn back on and check for cooler airflow out. If compressor runs, check for and clean condenser coil as possible cause of compressor overheating. If problem repeats, contact your installing technician to assist with troubleshooting.
Compressor runs but evaporator fan does not	
Possible Cause	Solution
Faulty fan motor.	Please contact the installing technician to troubleshoot.
Faulty controller.	Please contact the installing technician to troubleshoot.
Compressor short cycles	
Possible Cause	Solution
Evaporator blows on bottle probe.	Move bottle probe to a more central location.
System low on refrigerant charge.	Please contact the installing technician to troubleshoot.
Condensing fan motor/capacitor faulty.	Please contact the installing technician to troubleshoot.
Compressor and/or starting components faulty.	Please contact the installing technician to troubleshoot.
Humidity in cellar too low	
Possible Cause	Solution
Not enough moisture.	Raise the Fon setting to increase the humidity level.

TECHNICAL ASSISTANCE

WhisperKOOL Customer Service is available Monday through Friday from 6:00 a.m. to 4:00 p.m. Pacific Standard Time.

The appointed customer service representative will be able to assist you with your questions and warranty information more effectively if you provide them with the following:

- The model and serial number of your WhisperKOOL systems.
- Location of unit and installation details, such as ventilation, ducting, construction of your wine cellar, and room size. Photos of the cellar and installation location may be needed.

Contact WhisperKOOL Customer Service

1738 E. Alpine Ave
Stockton, CA 95205
www.WhisperKOOL.com
E-mail: support@whisperkool.com
Phone: 209-466-9463
US Toll Free: 1-800-343-9463
Fax: 209-466-4606

ACCESSORIES FOR COOLING UNITS

WhisperKOOL offers accessories to enhance and customize your wine-cooling unit.

Exterior Housing

Protects the condensing unit from the weather elements when the unit is located outside.

Condensate Pump Kit

The condensate pump kit is designed as an automatic condensate removal pump for water dripping out of our evaporator unit's drain line. The pump is controlled by a float/switch mechanism that turns the pump on when approximately 2-1/4" of water collects in the tank, and automatically switches off when the tank drains to approximately 1-1/4". The condensate pump kit allows the excess condensate to be pumped up to 20 ft. away from the unit.

Accessories can be purchased at www.whisperkool.com

**WhisperKOOL Product Terms and Conditions
Including Product Limited Warranty And Product Installation Requirements
For WhisperKOOL Split System Series**

ATTENTION: PLEASE READ THESE TERMS OF USE CAREFULLY BEFORE INSTALLING YOUR WHISPERKOOL COOLING SYSTEM. INSTALLING YOUR WHISPERKOOL COOLING SYSTEM INDICATES THAT YOU ACCEPT AND AGREE TO EACH OF THE TERMS AND CONDITIONS SET FORTH HEREIN ("TERMS OF USE"). IF YOU DO NOT ACCEPT THESE TERMS OF USE, YOU RISK VOIDING YOUR WARRANTY AND ASSUMING ADDITIONAL REPAIR AND REPLACEMENT COSTS.

1. Purchase of a WhisperKOOL Cooling System assumes that the Purchaser ("End User") fully accepts and agrees to the Terms and Conditions set forth in this document. The Terms and Conditions of Sale and Owner's Manual are shipped with each unit and, if another copy is needed, replacement copies can be downloaded from the company website (whisperkool.com) or by contacting WhisperKOOL directly for a new copy. WhisperKOOL reserves the right, in its sole discretion, to change its Terms and Conditions at any time, for any reason, without notice.

2. WhisperKOOL Product Installation and Limited Warranty

- A. Purchaser of the product must arrange for the product to be installed by a certified HVAC/R technician in accordance with procedures set forth by WhisperKOOL and described in the WhisperKOOL Owner's Manual.
- B. The HVAC/R technician installing the product must complete the designated portion of the Split Startup Checklist and provide licensing or certification identification number information to assist in the warranty registration process.
- C. Purchaser must return the completed Split Startup Checklist to WhisperKOOL within thirty (30) days of installation of Product. The Split Startup Checklist must be approved by WhisperKOOL to activate the Limited Warranty. If the Split Startup Checklist is approved, Purchaser will be sent activation approval documents and will start receiving the benefits of the Limited Warranty throughout the warranty period. If the Split Startup Checklist is incomplete, Purchaser will be informed they have five days to complete the Split Startup Checklist and re-submit to WhisperKOOL. The Split Startup Checklist will be reviewed again, and if denied, Purchaser will be informed that they have 10 business days for corrective action. Failure to register the Product may result in loss of warranty.
- D. Purchaser is responsible for the full costs of installation and any additional parts required for the proper and complete installation of the product.
- E. For Split Systems returned to WhisperKOOL in accordance with the terms and conditions of the Limited Warranty, WhisperKOOL warrants against defects in material and workmanship as follows:
 - 1. LABOR** - For a period of two (2) years commencing on the date of purchase, WhisperKOOL will, at its option and discretion, reimburse up to \$250 to the End User for cost incurred for servicing, repairing, removing or installing warranty parts. Invoice for service must be forwarded to WhisperKOOL for assessment and processing. The Split System warranty is invalid if there is attempted repair by anyone other than an HVAC/R technician approved by WhisperKOOL to service the Product.
 - 2. PARTS** - For a period of two (2) years commencing on the date of purchase, WhisperKOOL will supply, at no charge, new or rebuilt replacement parts in exchange for defective parts. Replacement parts are warranted only for the remainder of the original warranty period.
 - 3. FREIGHT** - For a period of two (2) years commencing on the date of purchase, if after WhisperKOOL approved evaluation the original Product failure is determined to be the cause of a manufacturers defect, and not the cause of an installation error or other cause, WhisperKOOL will cover at its option, freight for the replacement parts or Product.

The following part or cause of failure is not the responsibility of WhisperKOOL:

- Improper voltage supply
- Line set with screw connectors (high end and low end)
- Leaks found at the braze points when performing pressure check
- Unit that has been charged incorrectly
- Incorrect tubing diameter used on line set
- A unit that has been wired incorrectly
- Valve stem on condenser side
- Improper installation of P-Trap
- Lack of P-Trap (if required)
- Condensers that are installed outdoors or in elements that would affect operation without proper cover or housing. (Housing is available from Manufacturer).

Product Warranty Limitations and Exclusions.

1. This limited warranty does not cover cosmetic damage caused during installation, damage due to acts of God, commercial use, accident, misuse, abuse, negligence, or modification to any part of the Product. Delivery and installation of the Product, any additional parts required, as well as removal of the Product if warranty work is required, are all at the sole cost, risk and obligation of the End User.
2. This limited warranty does not cover damage due to improper installation or operation or lack of proper maintenance of the Product, connection of the Product to improper voltage supply, or attempted repair of the Product by anyone other than a technician approved by WhisperKOOL to service the Product.
3. This limited warranty does not cover any Product sold "AS IS" or "WITH ALL FAULTS."
4. Product that has been replaced during warranty period does not extend the warranty period past the original date of purchase.
5. This limited warranty is valid only in the continental United States. Sales elsewhere are excluded from this warranty.
6. Proof of purchase of the Product in the form of a bill of sale, receipted invoice or serial number, which is evidence that the Product is within the Limited Warranty Period, must be presented by the End User to WhisperKOOL in order to obtain limited warranty service.
7. This limited warranty is void if the factory applied serial number has been altered or removed from the Product.
8. This limited warranty is voided if installed in an enclosure of insufficient design that does not follow the Product installation requirements stated herein and in the owner's manual.
9. Removing the rivets from the Product's unit housing without prior authorization from WhisperKOOL voids this limited warranty.
10. The End User must first contact WhisperKOOL Customer Service by telephone (at 1-800-343-9463) prior to attempting service on any Product still under the limited warranty; else the limited warranty is voided.
11. This limited warranty does not cover Product being concealed by, but not limited to, vegetation, fabric, shelving, mud, snow, or dirt. Product must not be painted or limited warranty will be void.
12. This limited warranty does not cover exposure to corroding environments such as, but not limited to, petroleum and gasoline products, cleaning solvents, caustic pool chemicals, and marine air.
13. This limited warranty does not cover any cause not relating to Product defect.
14. THE REPAIR OR REPLACEMENT OF THE PRODUCT AS PROVIDED UNDER THIS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF YOU, THE END USER, AS WELL AS ANYONE ELSE IN THE CHAIN OF TITLE OF THE PRODUCT, DOES NOT START A NEW LIMITED WARRANTY TIME PERIOD, AND IS IN LIEU OF ALL OTHER WARRANTIES (EXPRESS OR IMPLIED) WITH REGARD TO THE PRODUCT. IN NO EVENT SHALL WHISPERKOOL BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL, SPECIAL OR CONTINGENT DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THE IMPLIED WARRANTIES OF MERCHANTABILITY

1. AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY EXPRESSLY DISCLAIMED. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This limited warranty gives you specific legal rights, and you may have other rights, which vary from state to state.
2. Failure of the End User to comply with all of the Product Installation Requirements, Maintenance Requirements and End User Requirements may, at WhisperKOOL's sole discretion, void this limited warranty.
3. No one has any authority to add to or vary the limited warranty on this Product.

3. Maintenance Requirements

The End User is responsible for checking the coils on the condenser unit and vacuuming them every three months to maintain them free of debris. It is the End User's responsibility to clean off any accumulated dust, lint, or other debris from the front and rear intake grills; failure to do this on a regular basis will restrict the airflow and may affect the Product's ability to function properly. Periodically cleaning the Product's vents will help assure maximum cooling efficiency. The drain tube must also be checked and kept clean and free of debris and mold to maintain proper performance.

Mold is a natural living organism in the environment. It exists in the air in the form of microscopic spores that move in and out of buildings through doors, windows, vents, HVAC systems and anywhere else that air enters. Once it is discovered, mold must be addressed quickly and appropriately. Delayed or improper treatment of mold issues can result in costly and reoccurring repairs. If the End User suspects a mold problem, it is always best to hire a qualified and experienced mold remediation specialist.

4. Additional End User Costs And Responsibilities

Terms and conditions for replacing the Product that is being evaluated for limited warranty.

1. After evaluation by a certified HVAC/R technician and the Product is found to be un-repairable in the field, contact WhisperKOOL Customer Service to arrange for replacement under the warranty guidelines. When a claim for warranty is submitted for a condenser skid, the End User must purchase a new condenser skid from WhisperKOOL at retail price. Upon installation of the new condenser skid by a certified HVAC/R Technician, the HVAC/R Technician must complete the Installation Checklist and End User must submit the Installation Checklist to WhisperKOOL Customer Service for approval. The original condenser skid must be returned within 21 days to WhisperKOOL for failure analysis. If the Installation Checklist is approved and the failure is evaluated as defective and not installation error or other reason, the End User will be refunded for the cost of the replacement skid.
2. If the Product failure is evaluated and it is determined that it is an installation error or other reason, all costs, including shipping will be the responsibility of the End User.

The following items are not covered under any warranty and are the sole responsibility of the End User:

- A. End Users should satisfy themselves that the Product they are purchasing is suitable for their particular needs and requirements, and thus no responsibility will be placed with WhisperKOOL for the End User's decisions in this regard.
- B. End Users must assure that the product is installed by a certified HVAC/R technician. Failure to do so will result in Voiding the Limited Warranty.
- C. It is the End User's responsibility to secure safe haven/storage for ANY AND ALL items that are being kept and stored in the End User's wine cellar, including any Product. WhisperKOOL takes no responsibility for the safety and preservation of the aforementioned items in the event that the environment becomes unsuitable to maintain a proper storage environment.
- D. End User is responsible for initial installation costs, including, but not limited to, labor costs and the cost of any additional parts necessary to complete the installation.
- E. End User is responsible for all costs incurred for the installation and/or removal of the Product, or any part thereof, unless such cost has been agreed by WhisperKOOL to be a warranty repair prior to the work being performed.

5. Sales and Use Tax

WhisperKOOL only collects California sales tax for orders shipped within the State of California; WhisperKOOL does not collect sales tax for orders shipped to other states. However, the Purchaser and the End User may be liable to the taxing authority in their state for sales tax and/or use tax on the Product. The Purchaser and the End User should each check with their state's taxing authority for sales and use tax regulations.

6. Customer Service and Troubleshooting

WhisperKOOL's customer service department is available to answer any questions or inquiries for End Users regarding a WhisperKOOL Product, as well as to assist in performing basic troubleshooting, Monday through Friday, from 6:00 a.m. to 4:00 p.m. PST, at telephone number 1-800-343-9463. WhisperKOOL reserves the right to have a certified, WhisperKOOL-approved, HVAC/R technician go on site and inspect the product if the initial troubleshooting warrants further investigation. WhisperKOOL Corporation is located at 1738 East Alpine Avenue, Stockton, California 95205.

7. Request for Product Evaluation and Repair Under Warranty

SPLIT SYSTEM FIELD SERVICE WARRANTY POLICY: This Policy is to clarify what falls under Warranty Service and what becomes the responsibility of the Owner. WhisperKOOL ("manufacturer") strives to provide our customers with a superior Product and we back our Product with a Two Year Limited Warranty. Please review the WhisperKOOL Product Terms and Conditions including Product Limited Warranty and Product Installation Requirements to ensure you have a complete understanding of our Policy and coverage of your Split System.

ARBITRATION: Any disputes arising out of or in connection with the installation and warranty of the Split System shall be referred to and finally resolved by a WhisperKOOL approved Independent Certified HVAC/R Technician. The evaluation of the Technician on all issues or matters of identifying the responsible party (WhisperKOOL or Installing Technician) shall be determined in a written report. This report will be made available to all concerned parties. If discovered under warranty, WhisperKOOL will assume the financial responsibility under their warranty guidelines. If the report finds the Owner's Installer as the responsible party, WhisperKOOL will provide all documentation to the customer to substantiate the findings. This will include the Invoice from the Independent Certified HVAC/R Technician and the written report of the findings. The Owner will become responsible for payment directly to WhisperKOOL for all charges incurred for repairs (labor, parts and shipping costs) on the Split System.

8. Miscellaneous Terms and Conditions

- A. **Return Policy.** All return inquiries must be made within thirty (30) calendar days of the original purchase of a Product and are subject to a twenty five percent (25%) restocking fee. Shipping costs are not refundable and the Purchaser is responsible for all return shipping costs (including customs fees and duties, if applicable).
- B. **Security Interest.** WhisperKOOL retains a security interest in each Product until payment in full.
- C. **Construction and Severability.** Every provision of these Terms and Conditions shall be construed, to the extent possible, so as to be valid and enforceable. If any provision of these Terms and Conditions is held by a court of competent jurisdiction to be invalid, illegal or otherwise unenforceable, such provision will, to the extent so held, be deemed severed from the contract of sale between Purchaser and WhisperKOOL, and all of the other non-severed provisions will remain in full force and effect.
- D. **Governing Law/Choice of Forum.** The laws of the State of California (without regard for conflicts of law) shall govern the construction and enforcement of the these Terms and Conditions of Sale (Sections 1 through 9 inclusive, including Product Limited Warranty And Product Installation Requirements), and further these Terms and Conditions of Sale shall be interpreted as through drafted jointly by WhisperKOOL and Purchaser. Any dispute will be resolved by the courts in and for the County of San Joaquin, State of California, and all parties, WhisperKOOL, Purchaser and End User, hereby irrevocably submit to the personal jurisdiction of such courts for that purpose. No waiver by WhisperKOOL of any breach or default of the contract of sale (including these Terms and Conditions of Sale) concerning a Product will be deemed to be a waiver of any preceding or subsequent breach or default.
- E. **Correction of Errors and Inaccuracies.** These Terms and Conditions may contain typographical errors or other errors or inaccuracies. WhisperKOOL reserves the right to correct any errors, inaccuracies or omissions, and to change or update these Terms and Conditions, at any time without prior notice.

9. Questions, Additional Information And Technical Assistance

A. Questions. If you have any questions regarding these Terms and Conditions or wish to obtain additional information, contact us via phone at 1-800-343-9463 or please send a letter via U.S. Mail to:

Customer Service
WhisperKOOL Corporation
1738 E Alpine Ave
Stockton, CA 95205

Email: support@whisperkool.com
Web: www.whisperkool.com

B. Technical Assistance. WhisperKOOL Customer Service is available Monday through Friday from 6:00 a.m. to 4:00 p.m. PST. The Customer Service representative will be able to assist you with your questions and warranty information more effectively if you provide them with the following:

1. The model and serial number of your WhisperKOOL UNIT.
2. The location of the system and installation details, such as ventilation, construction of your wine cellar, and room size.

Model _____ Serial Number _____

Installed by _____ Date _____

*Whisper***KOOL™**

WhisperKOOL
1738 E. Alpine Ave
Stockton, CA 95205
1-800-343-9463
www.whisperkool.com